 
 


SS0/TX5b

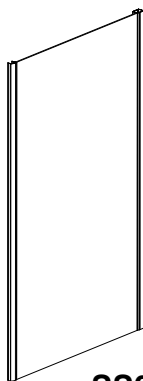

SS0-W/TX5b




(01) 2000000177764(94)






TX5b

PL	Instrukcja montażu
DE	Montageanweisung
GB	Installation instruction
FR	Instructions de montage
RU	Инструкция монтажа
CZ	Návod k montáži
RO	Instrucțiuni de montaj
HU	Útmutató
SK	Návod na montáž









 
SS0/TX5b, SS0-W/TX5b



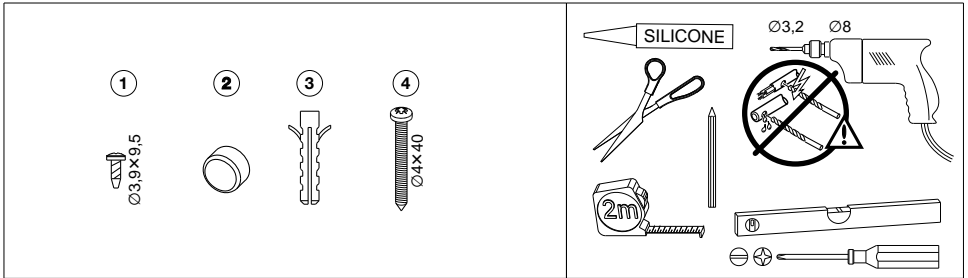


	①	②	③	④
SS0/TX5b	3	3	3	3
SS0-W/TX5b	3	3	3	3

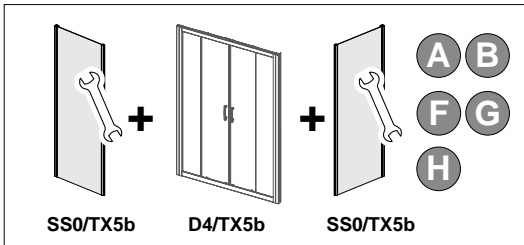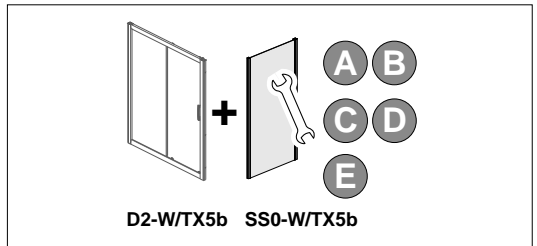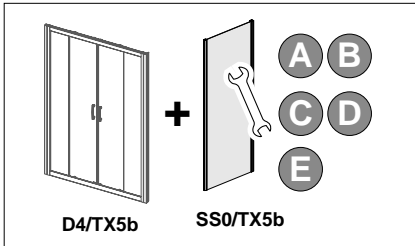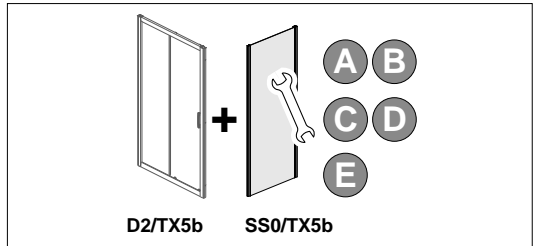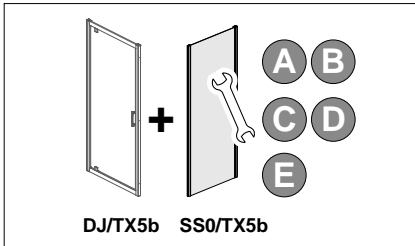     






A

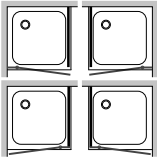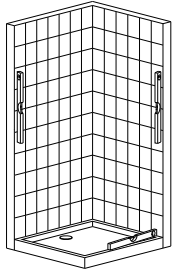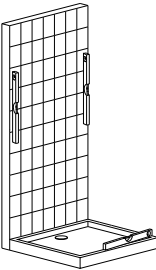         
	+ 1 x SS0/TX5b	+ 2 x SS0/TX5b
<p>DJ/TX5b</p> 		<p>—</p>
<p>D2/TX5b</p> 		<p>—</p>
<p>D4/TX5b</p> 		
		

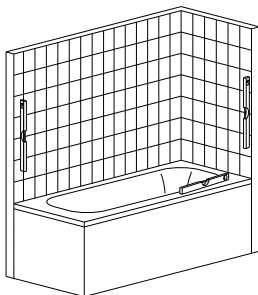   	+ 1 x SS0-W/TX5b	+ 2 x SS0-W/TX5b
<p>D2-W/TX5b</p> 		<p>—</p>
		<p>—</p>




SS0/TX5b, SS0-W/TX5b

      B

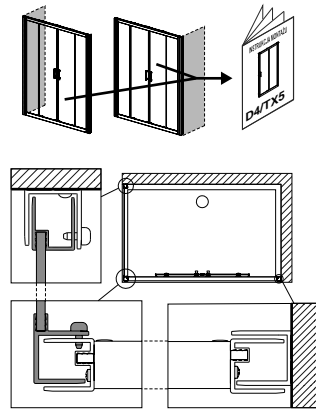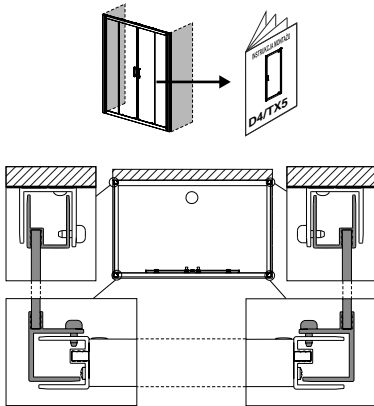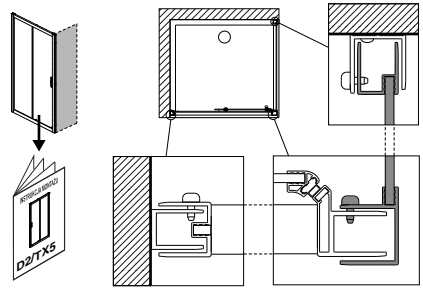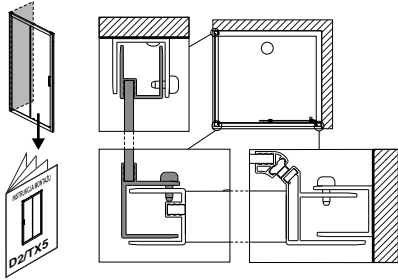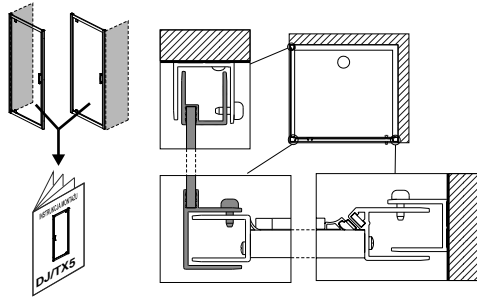

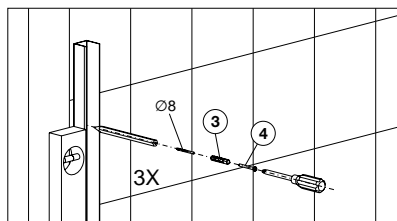

C

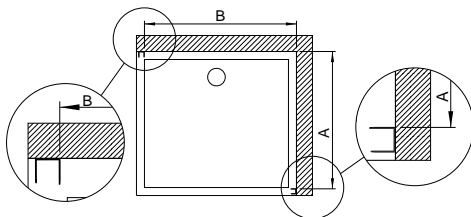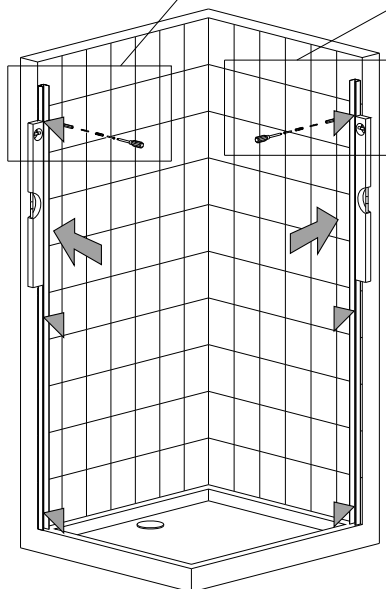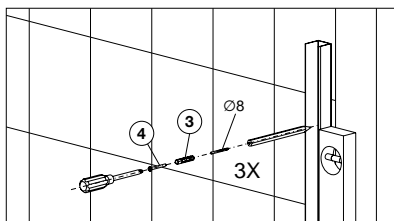   

DJ	B [mm]	SS0	A [mm]
70	639-673	70	646-663
80	739-773	75	696-713
90	839-873	80	746-763
		90	846-863
100	939-973	100	946-963

D2	B [mm]	SS0	A [mm]
90	841-875	70	649-666
100	941-975	75	699-716
		80	749-766
110	1041-1075	90	849-866
120	1141-1175	100	949-966




D2-W	B [mm]	SS0-W	A [mm]
120	1141-1175	70	649-666
130	1241-1275		
140	1341-1375	75	699-716
150	1441-1475		
160	1541-1575		
170	1641-1675		
180	1741-1775	80	749-766

D4	B [mm]	SS0	A [mm]
130	1238-1272	70	646-663
140	1338-1372	75	696-713
150	1438-1472	80	746-763
160	1538-1572	90	846-863
170	1638-1672	100	946-963
180	1738-1772		





* - Zaleca się montaż w środku zakresu regulacji.

SS0/TX5b, SS0-W/TX5b

   D

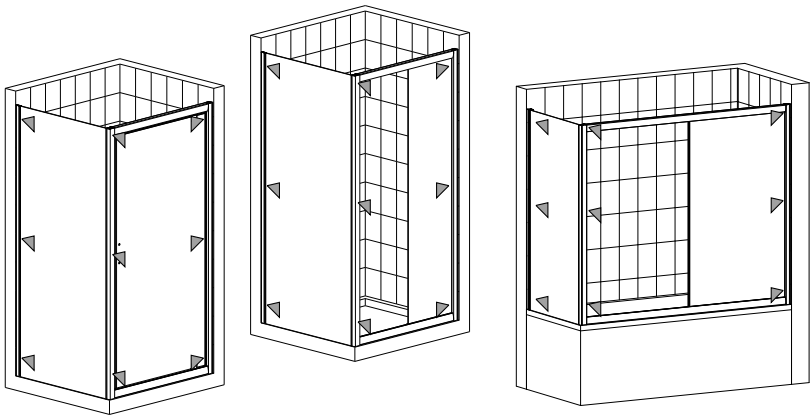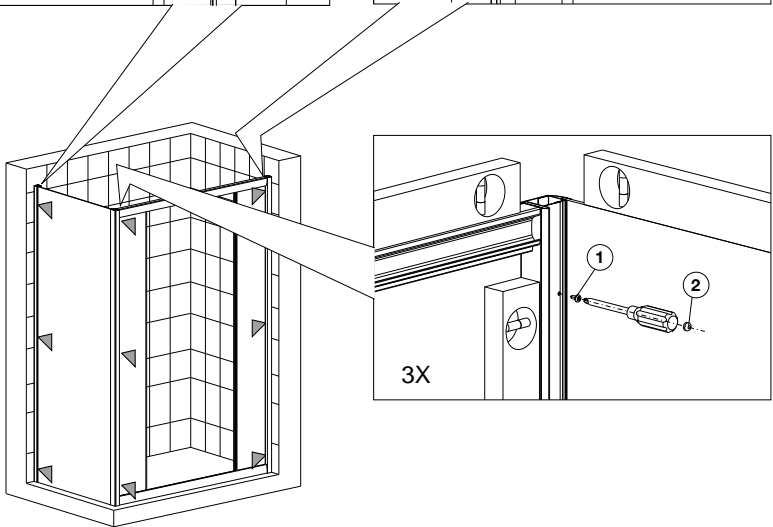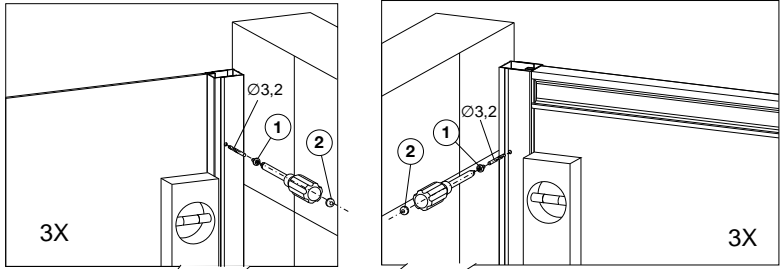


E

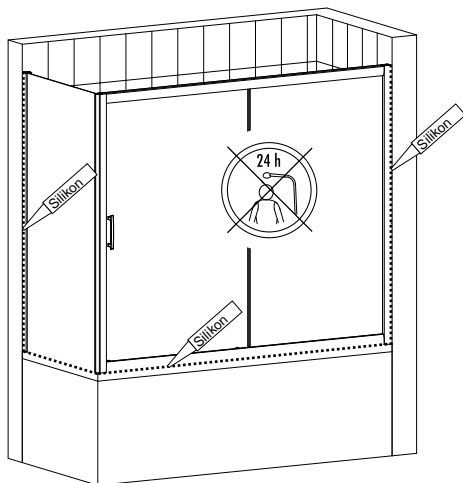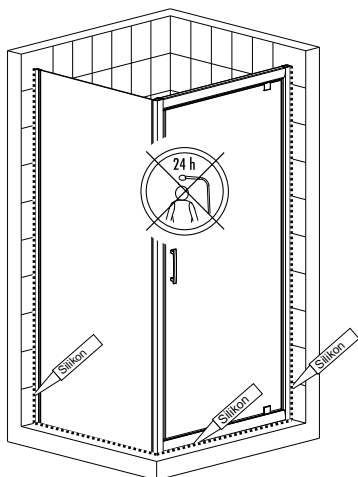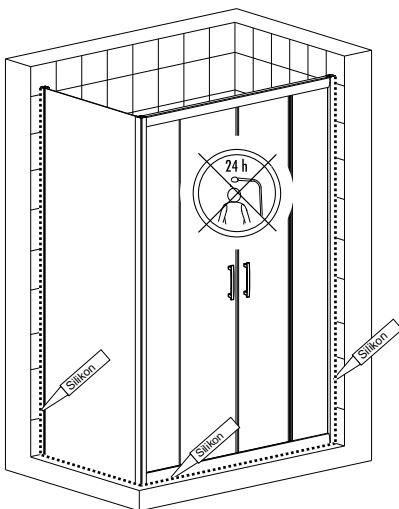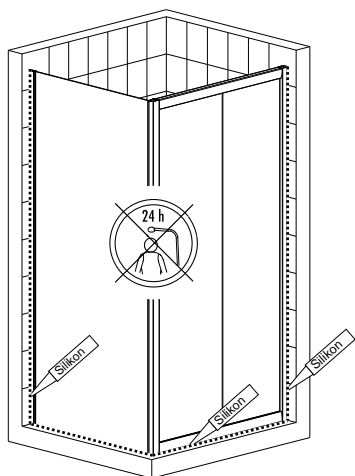    


SS0/TX5b, SS0-W/TX5b

 F





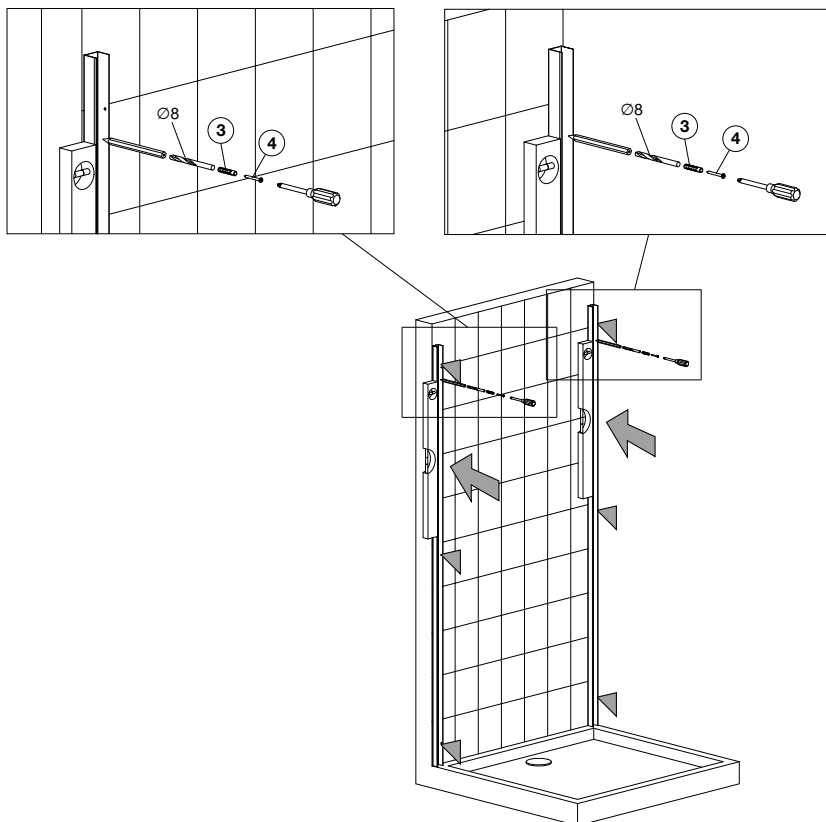


SS0+D4/TX5+SS0	A [mm]
...x130	1208-1242
...x140	1308-1342
...x150	1408-1442
...x160	1508-1542
...x170	1608-1642
...x180	1708-1742
...x190	1808-1842
...x200	1908-1942

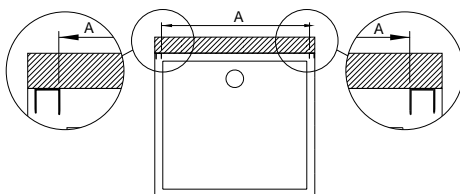 


* - Zaleca się montaż w środku zakresu regulacji.

     
G

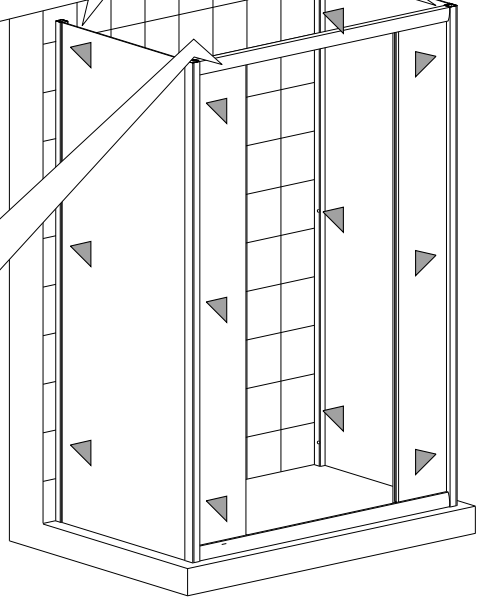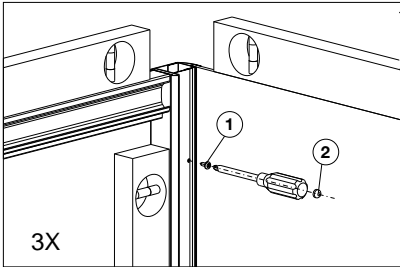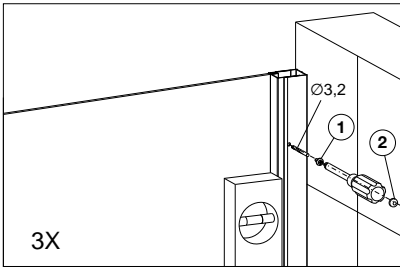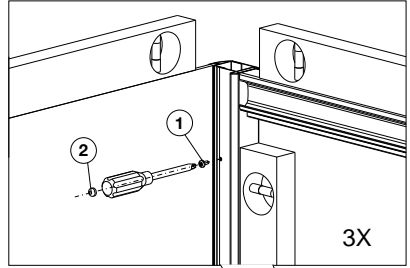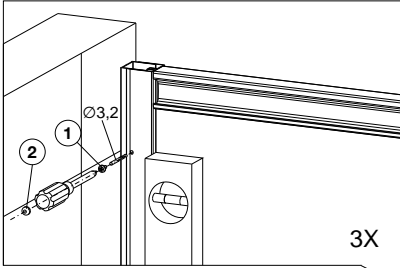

H

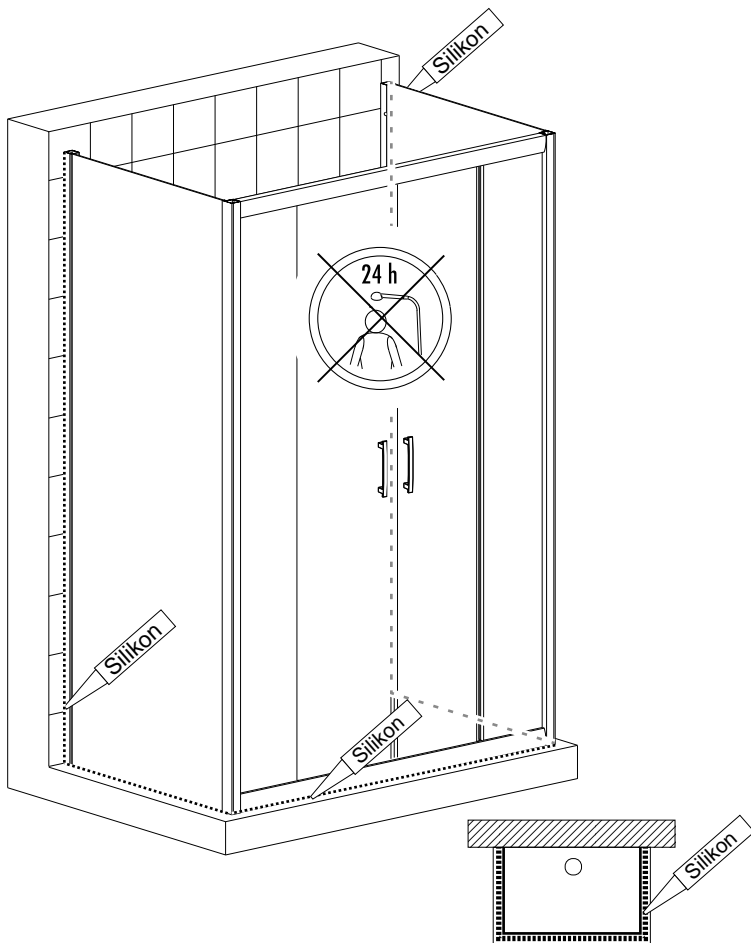 

SS0/TX5b

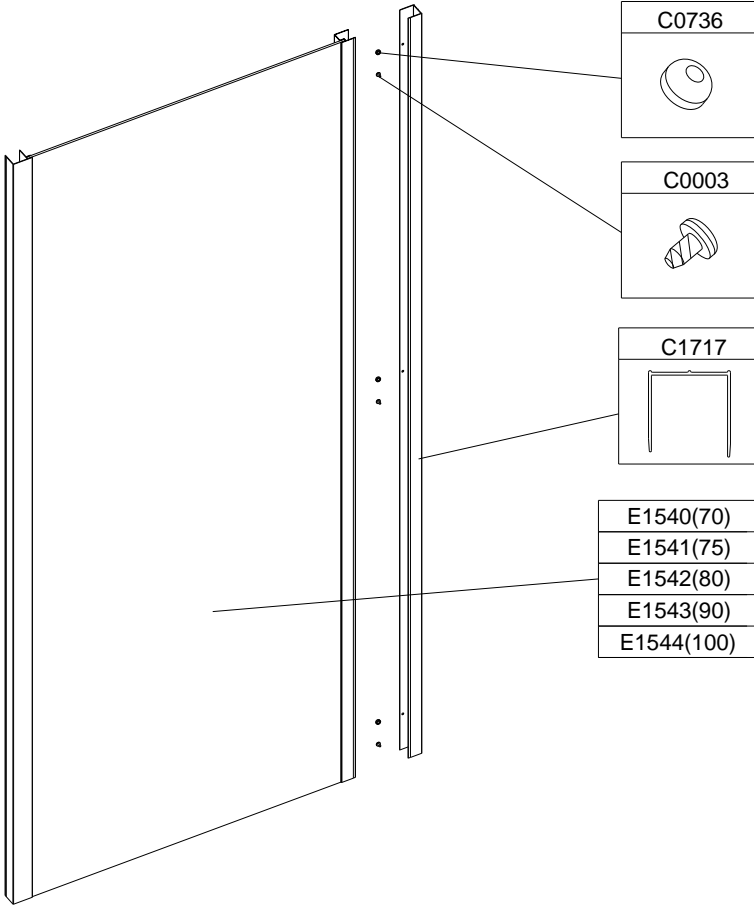 

SS0-W/TX5b

