



DJ-c



 
KN/DJ-c



KT/DJ-c



KC/DJ-c




(01)200000011126(94)











CLASSIC

- PL** Instrukcja montażu
- DE** Montageanweisung
- GB** Installation instruction
- FR** Instructions de montage
- RU** Инструкция монтажа
- CZ** Návod k montáži
- RO** Instrucțiuni de montaj
- HU** Útmutató
- SK** Návod na montáž

 DJ-c, KN/DJ-c, KT/DJ-c, KC/DJ-c

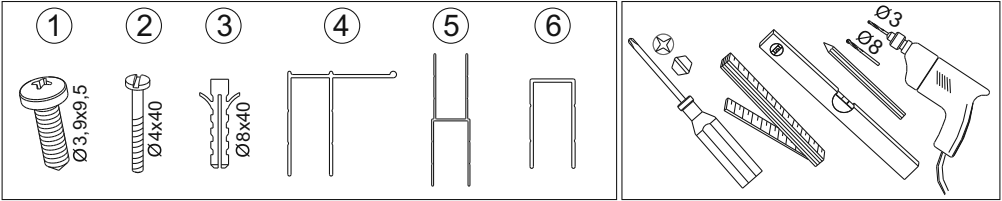

	①	②	③	④	⑤	⑥
DJ-c 70,80,90	4	4	4	2	-	-
DJ-c 70-80,80-90,90-100	8	4	4	2	2	-
KN/DJ-c	7	4	4	1	-	1
KT/DJ-c	10	4	4	-	-	2
KC/DJ-c	12	-	-	-	-	-

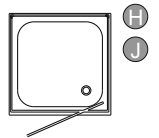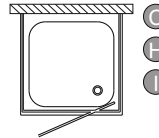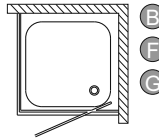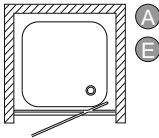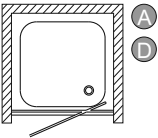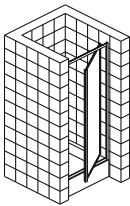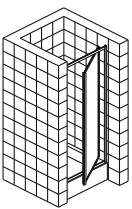          

DJ-c
70,80,90,

 
 
 
 
 
DJ-c
70-80,80-90,
90-100

KN/DJ-c

KT/DJ-c


KC/DJ-c

A

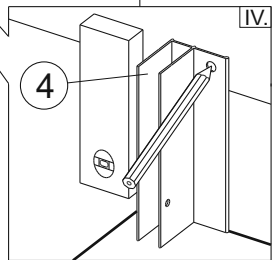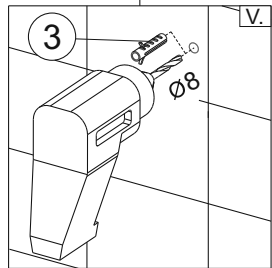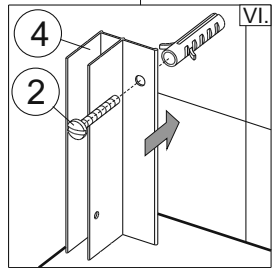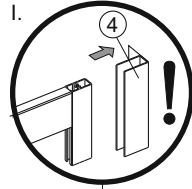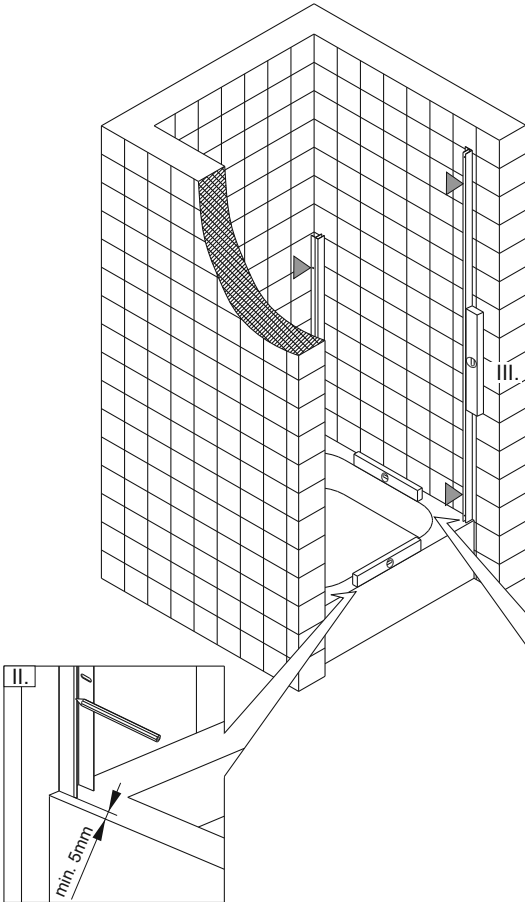


DJ-c, KN/DJ-c, KT/DJ-c, KC/DJ-c

 B

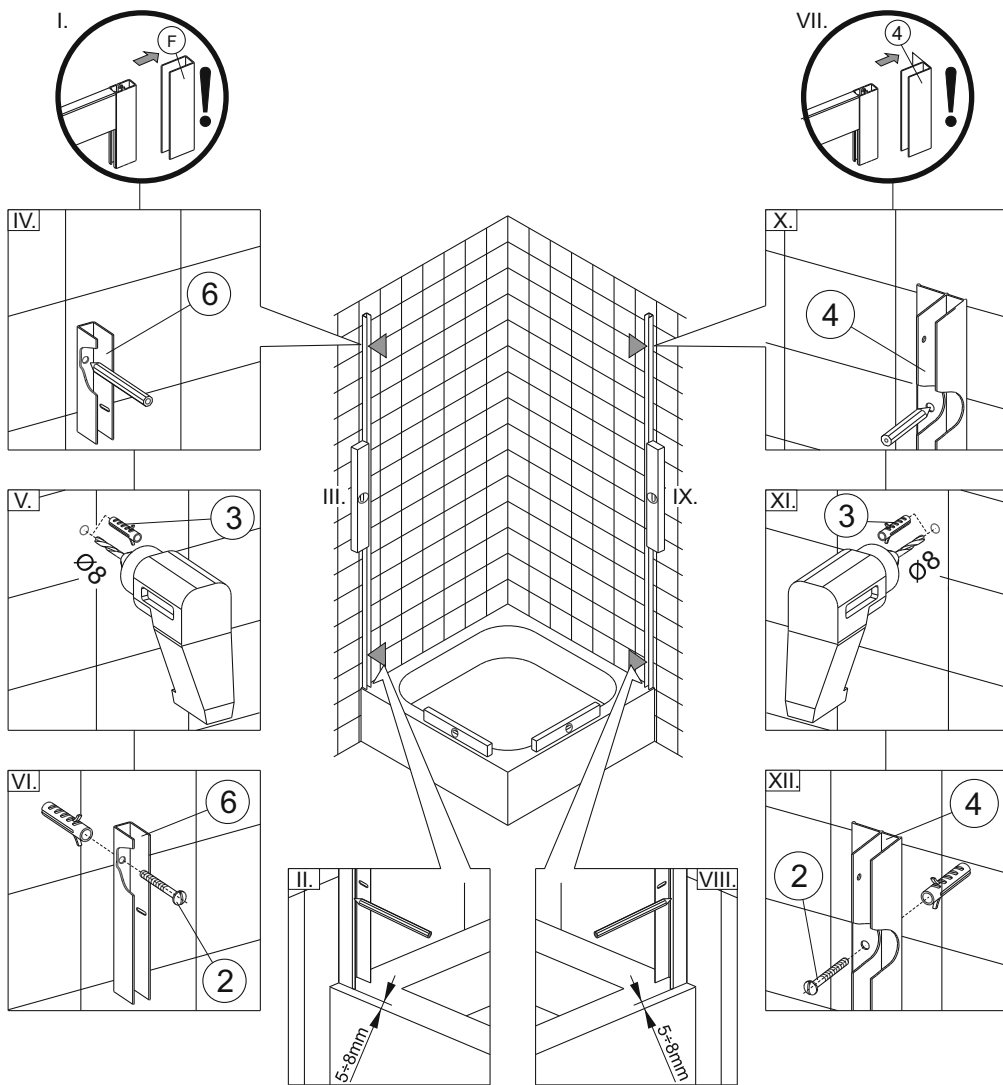


C








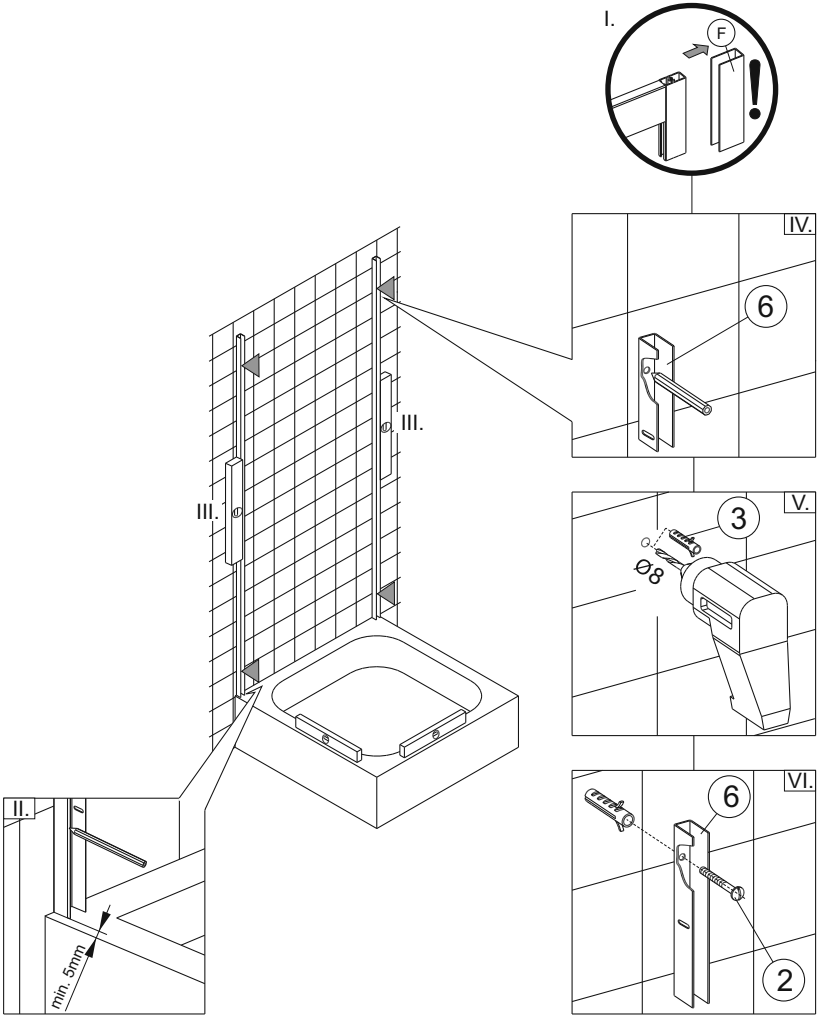 


DJ-c, KN/DJ-c, KT/DJ-c, KC/DJ-c

 
D

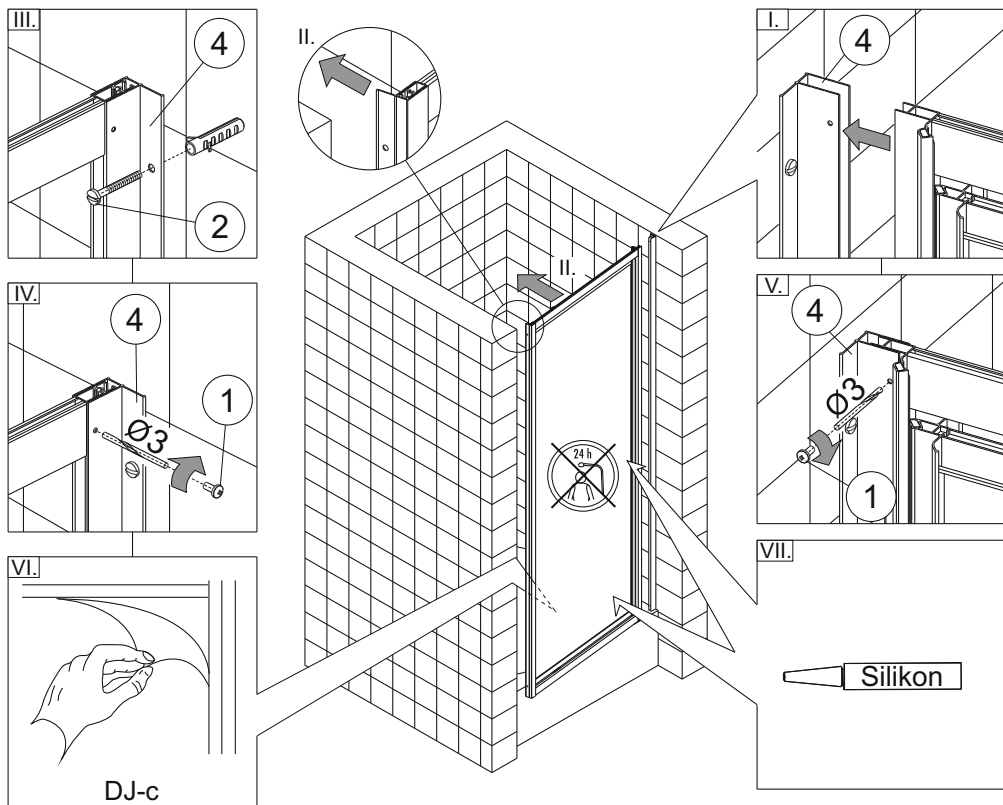







E

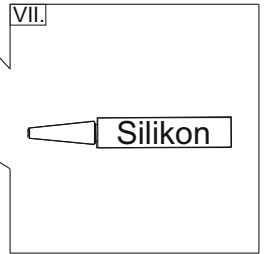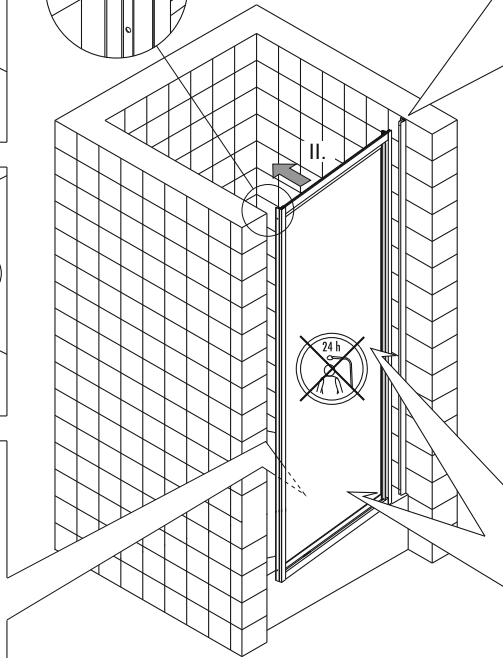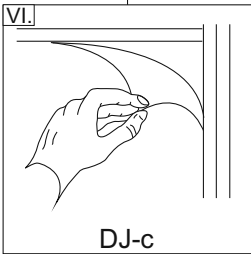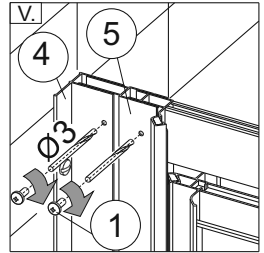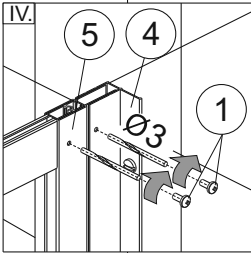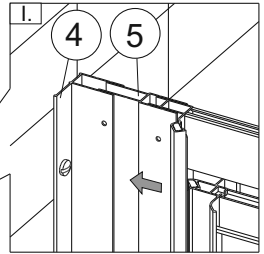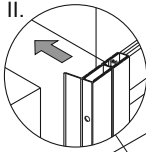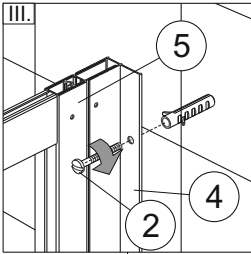        


F

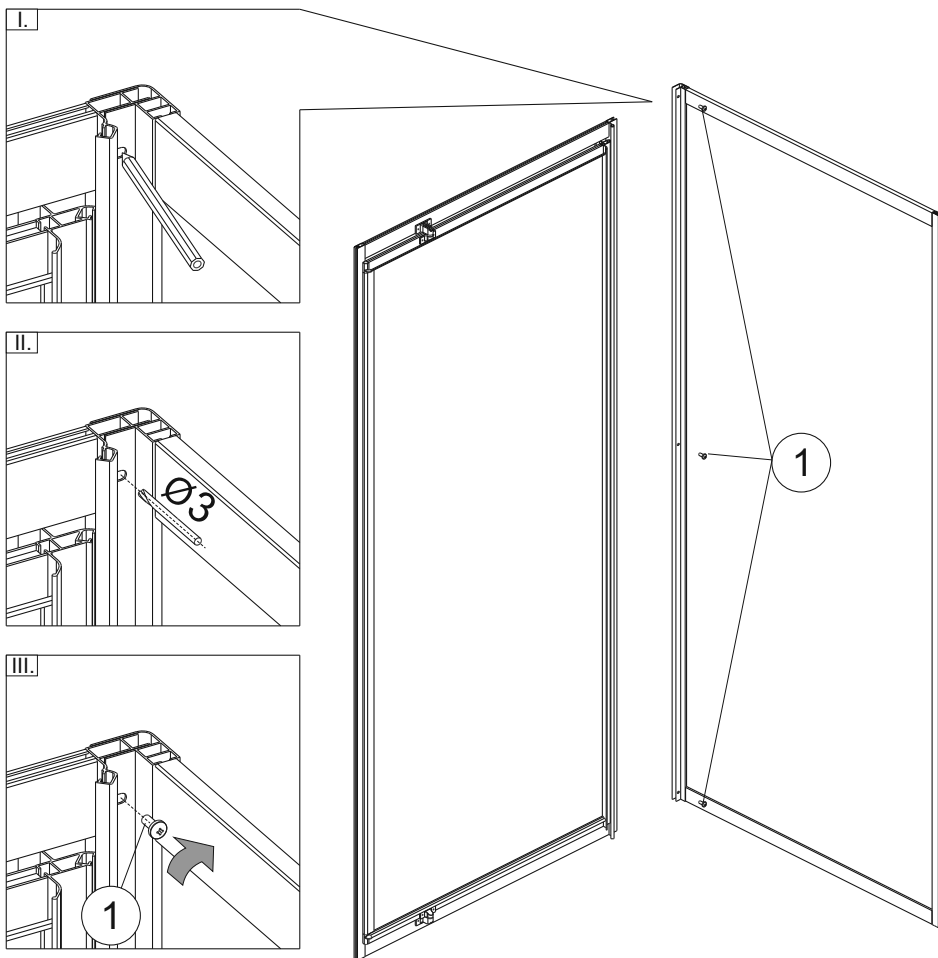 






G

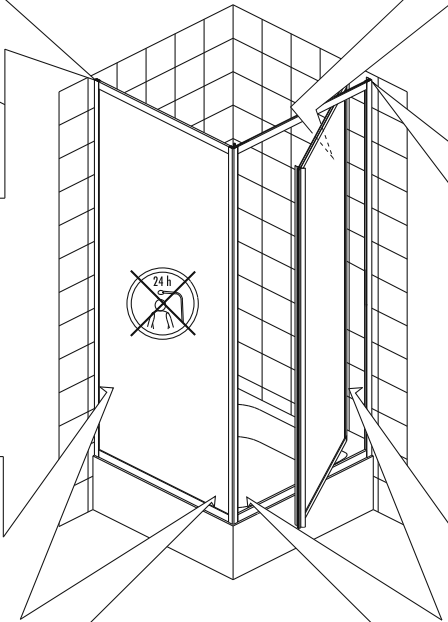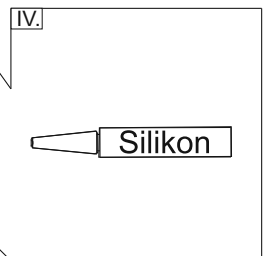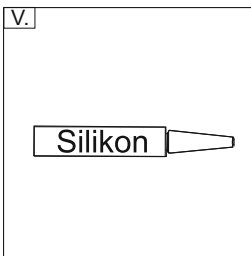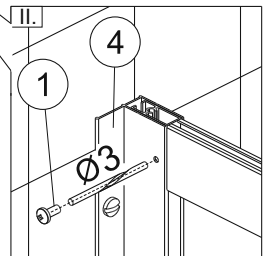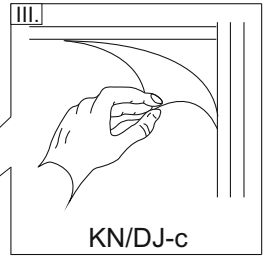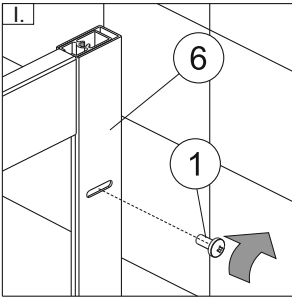      

H

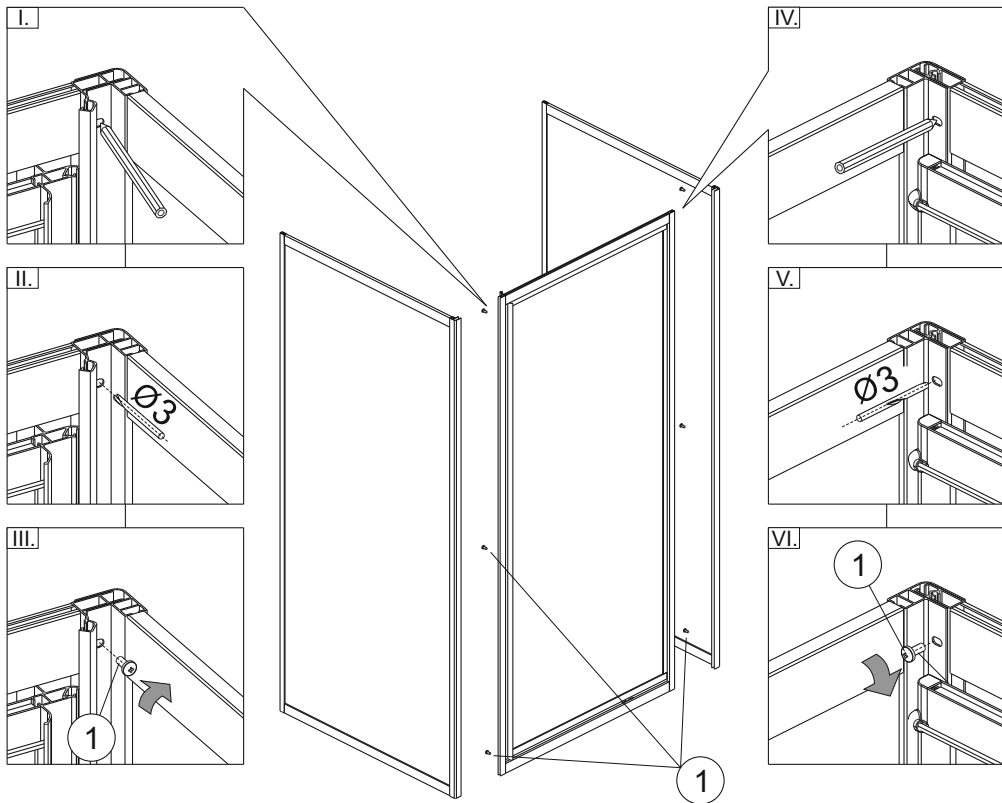 


I

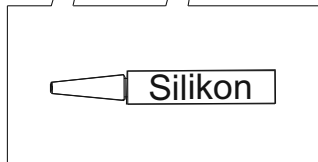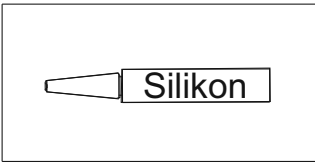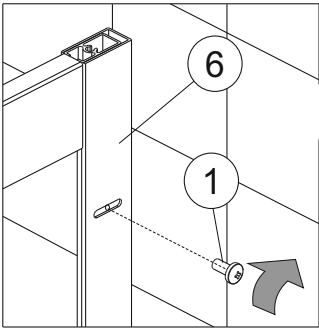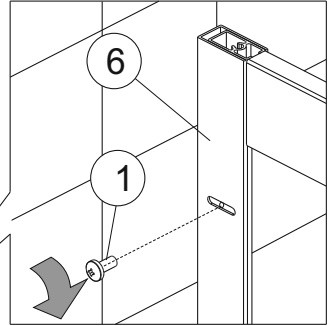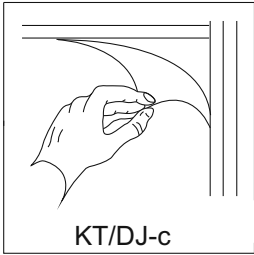     


DJ-c, KN/DJ-c, KT/DJ-c, KC/DJ-c

 
J

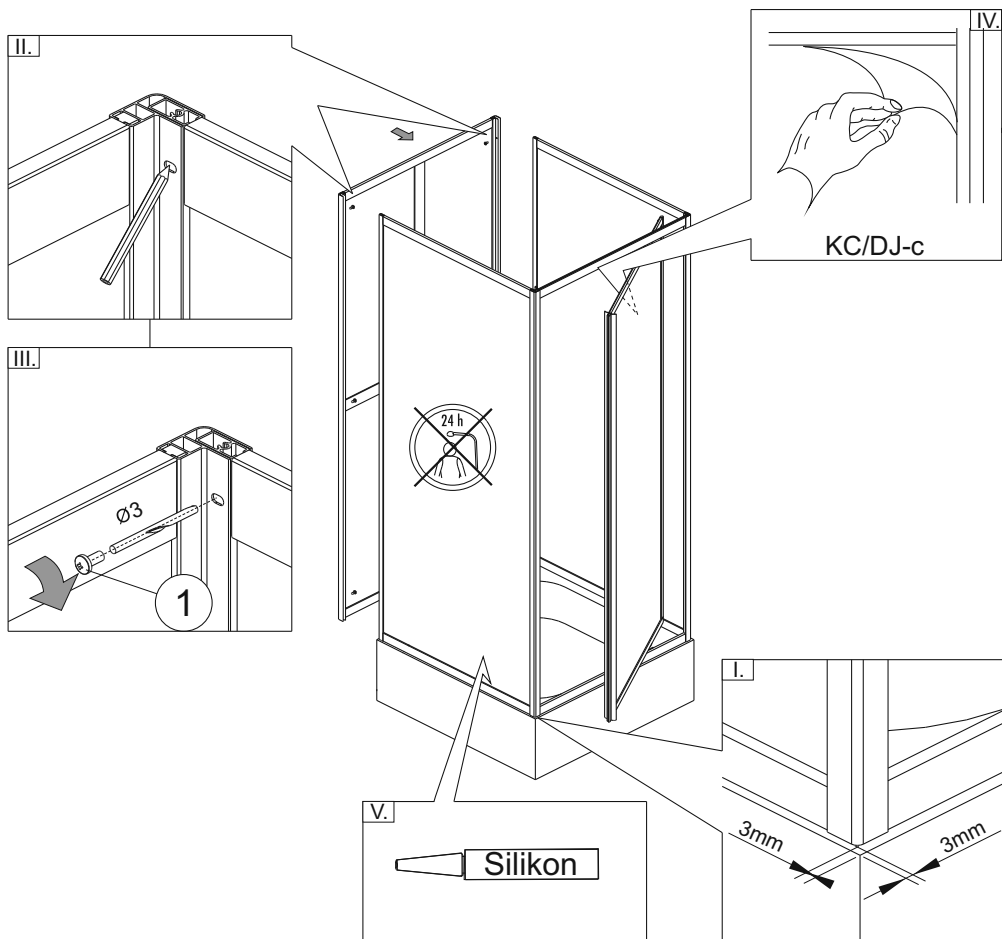


DJ-C

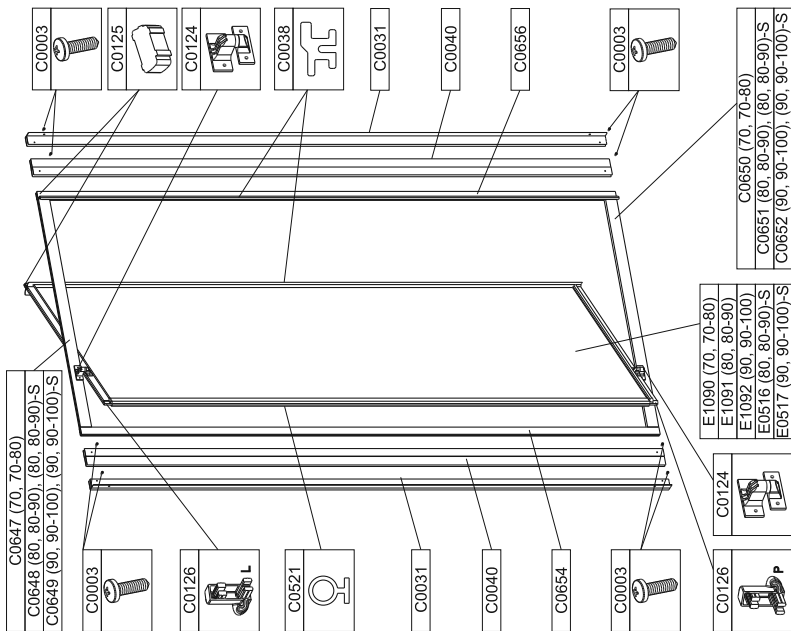 

KN/DJ-C

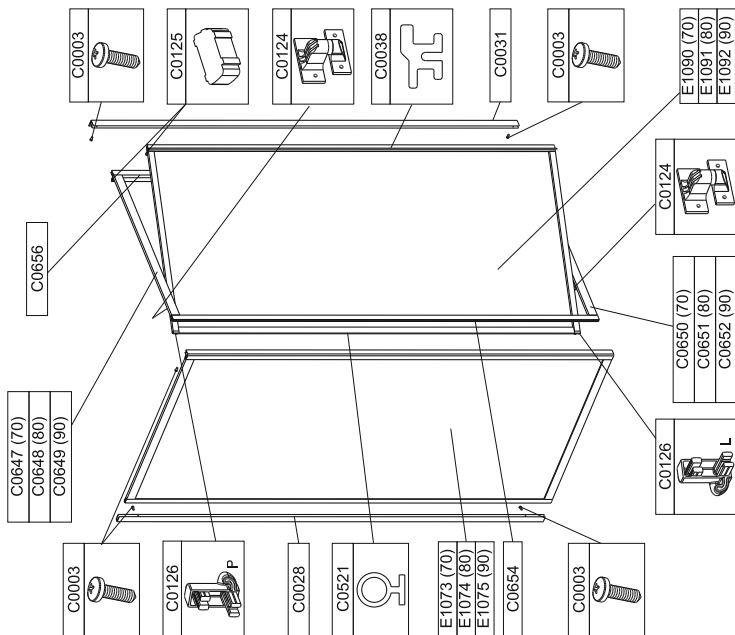 

KC/DJ-c

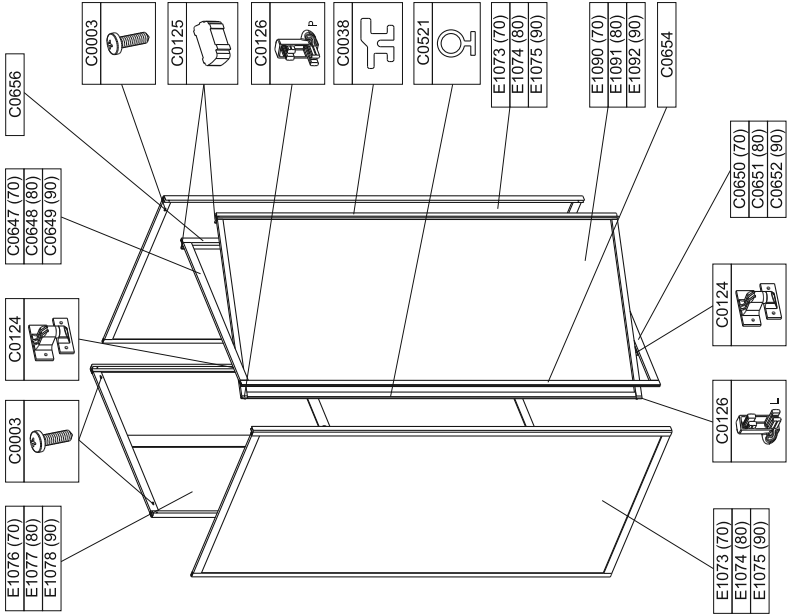 

KT/DJ-c

