




**KN2/PRIII**

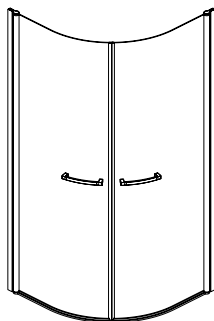

**KP2/PRIII**

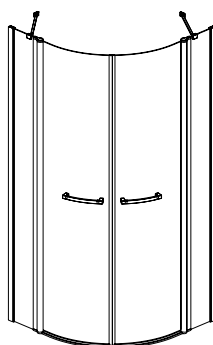

**KP4/PRIII**




(01) 200000152270(94)





# PRESTIGE

- PL** Instrukcja montażu kabiny
- DE** Montageanweisung Duschtrennung
- GB** Shower enclosure installation guide
- FR** Notice de montage de la cabine
- RU** Инструкция по установке кабины
- CZ** Návod k montáži kabiny
- RO** Instrucțiuni de montaj pentru cabină
- HU** Zuhanykabin szerelési útmutatója
- SK** Návod na montáž kabíny

# KN2/PRIII, KP2/PRIII, KP4/PRIII

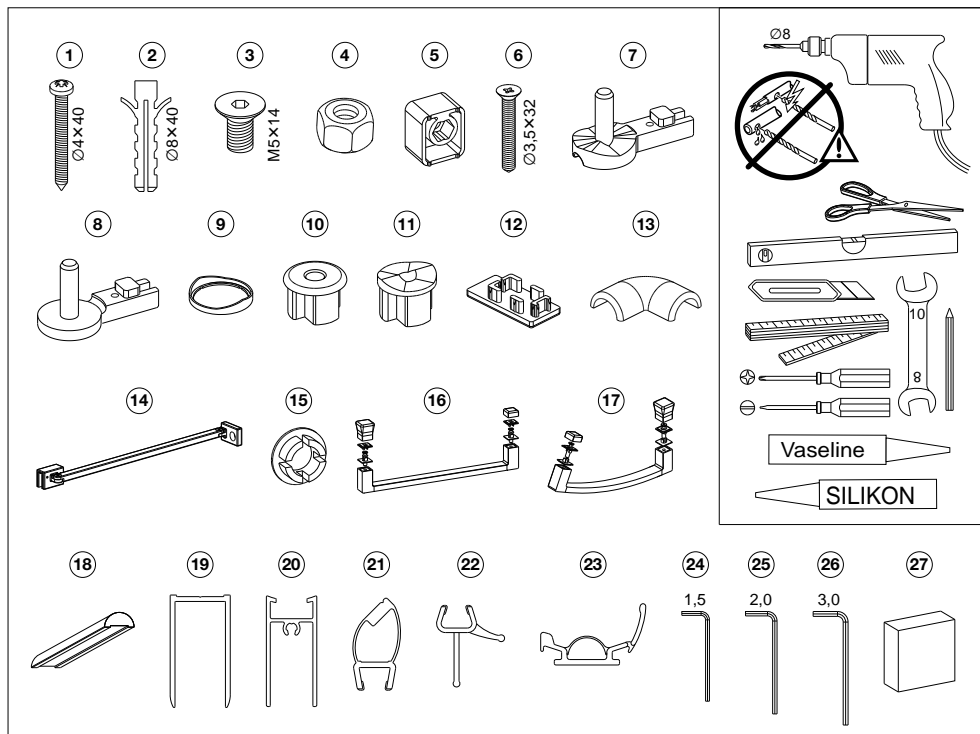


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	
KN2/PRIII	8	8	6	6	6	4	2	2	2	2	2	-	1	-	-	2	-	2	2	2	2	2	2	2	-	1	1	2
KP2/PRIII	8	8	6	6	6	4	2	2	2	2	2	-	-	-	-	2	1	2	2	2	2	2	2	2	-	1	1	2
KP4/PRIII	10	10	6	6	6	4	2	2	2	2	2	4	-	2	2	-	2	1	2	-	2	2	2	2	1	1	1	2




---


A

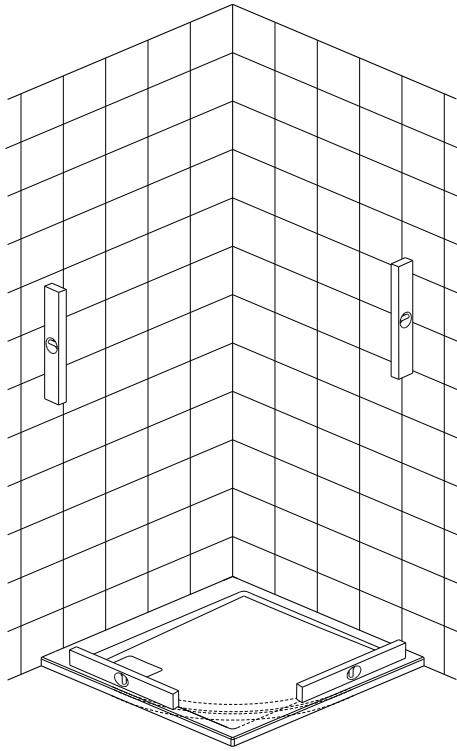




# KN2/PRIII, KP2/PRIII, KP4/PRIII

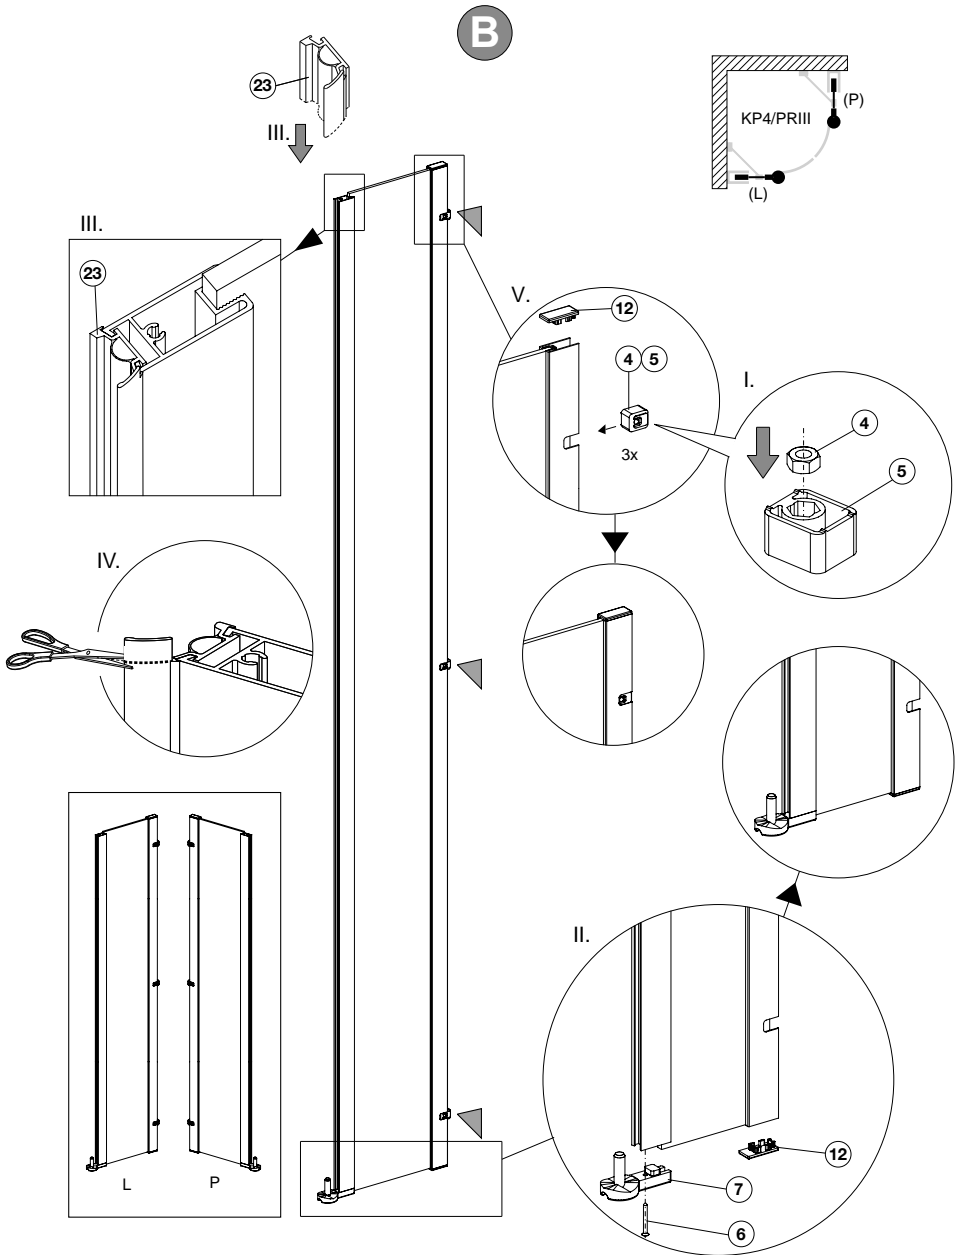


C

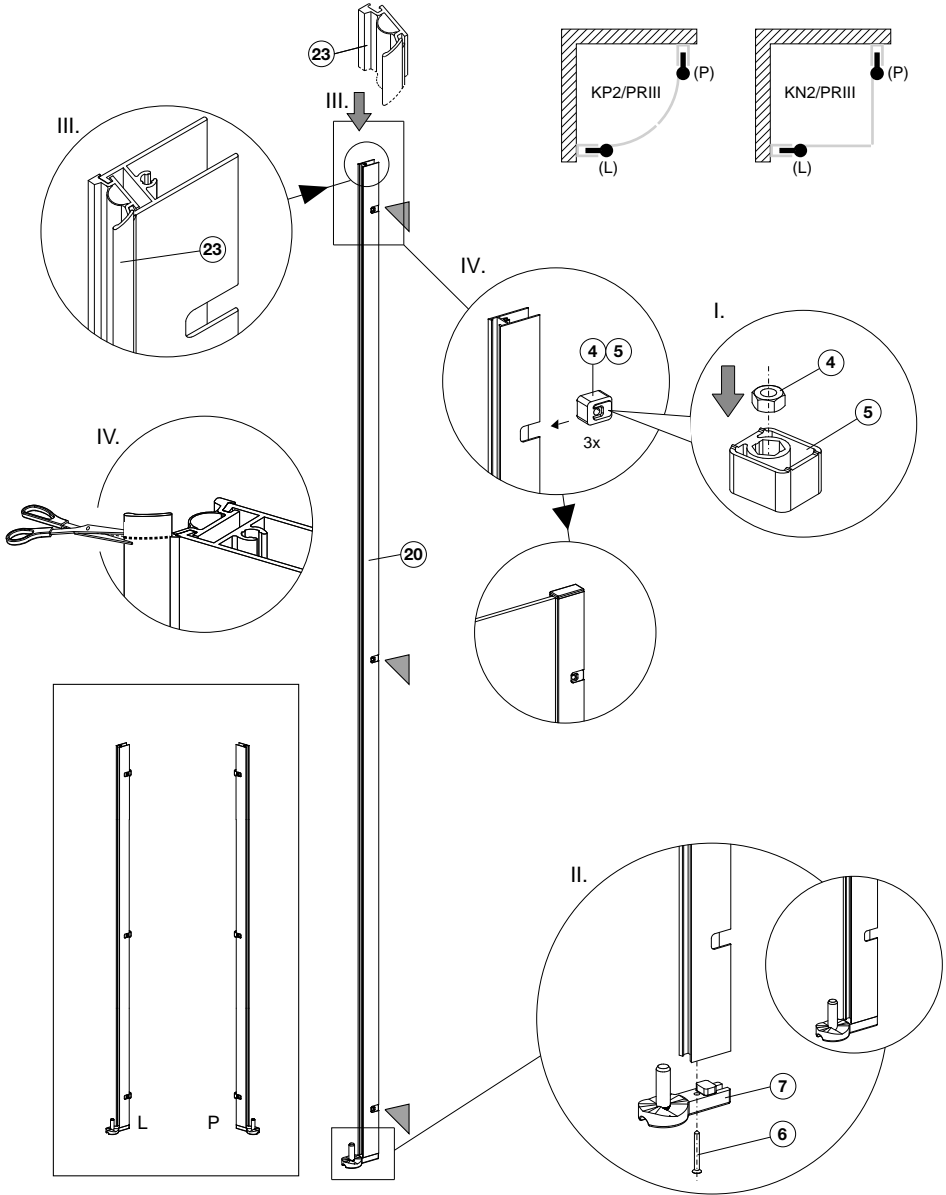


# KN2/PRIII, KP2/PRIII, KP4/PRIII

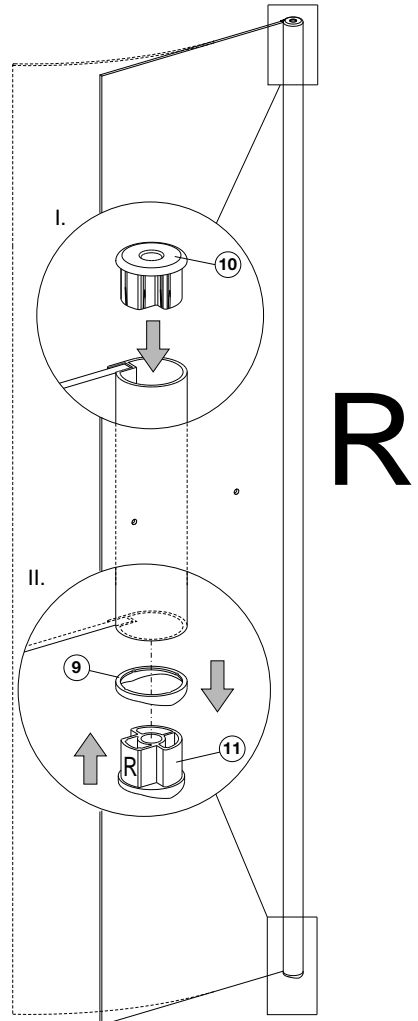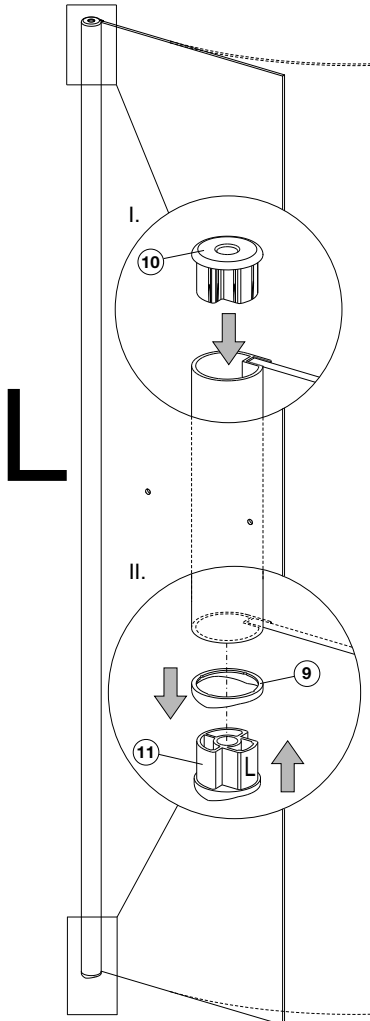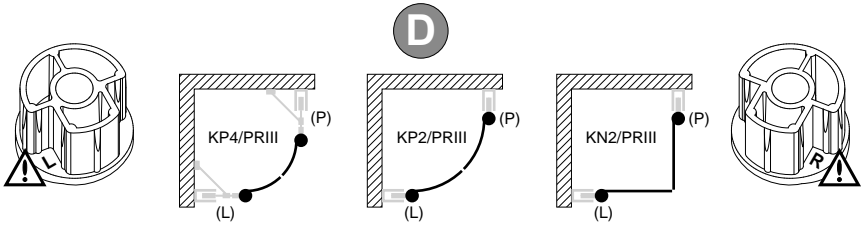

**E**

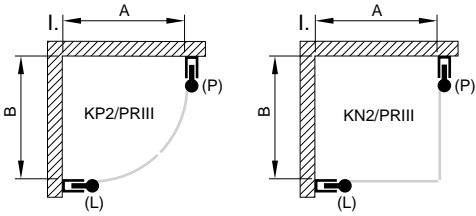


	A [mm]	B [mm]
KN2/PRIII-80	764	764
KN2/PRIII-90	864	864
KP2/PRIII-80	764	764
KP2/PRIII-90	864	864

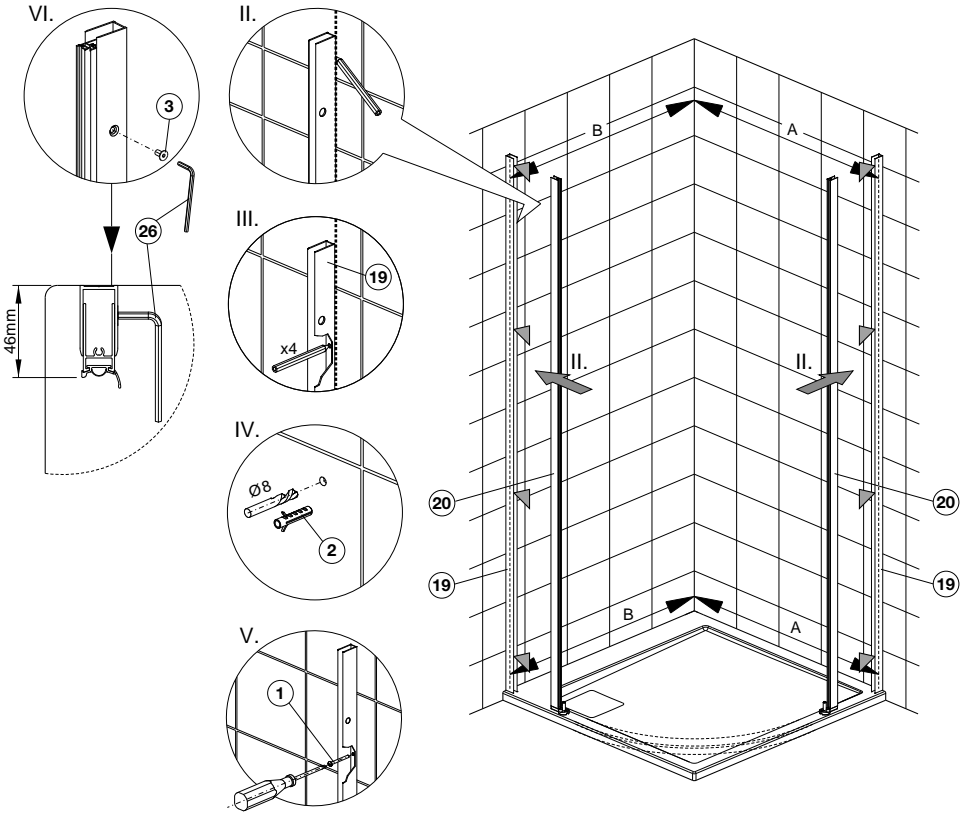


# KN2/PRIII, KP2/PRIII, KP4/PRIII

F







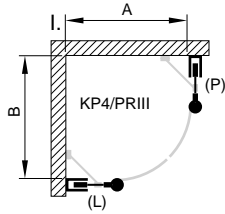


	A [mm]	B [mm]
KP4/PRIII-100	964	964






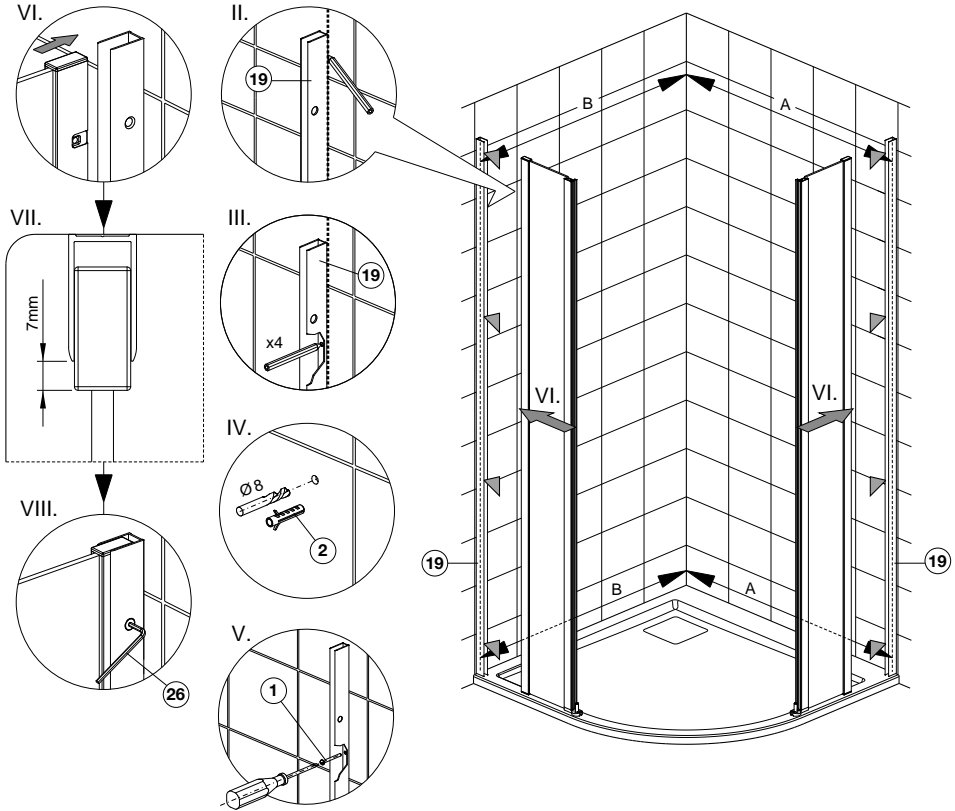





G

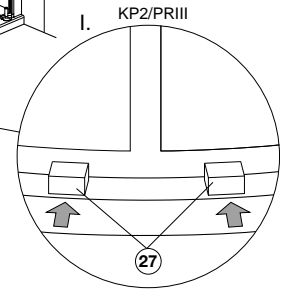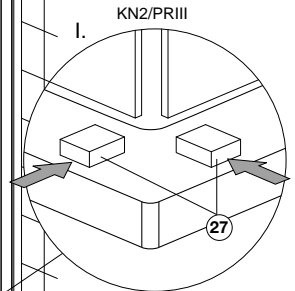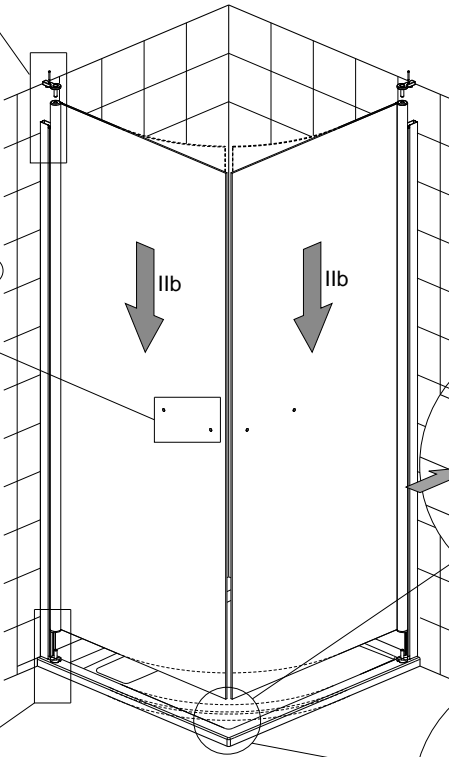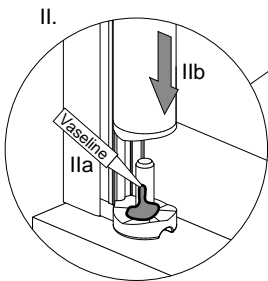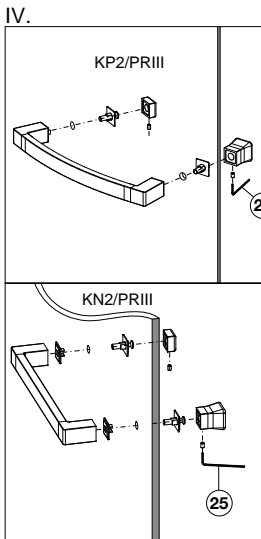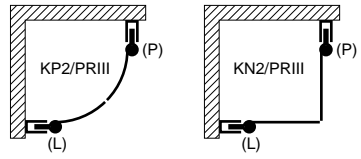
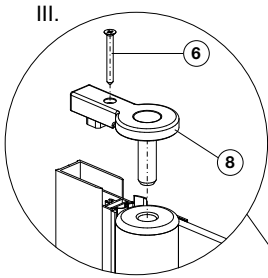


H

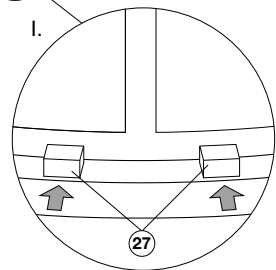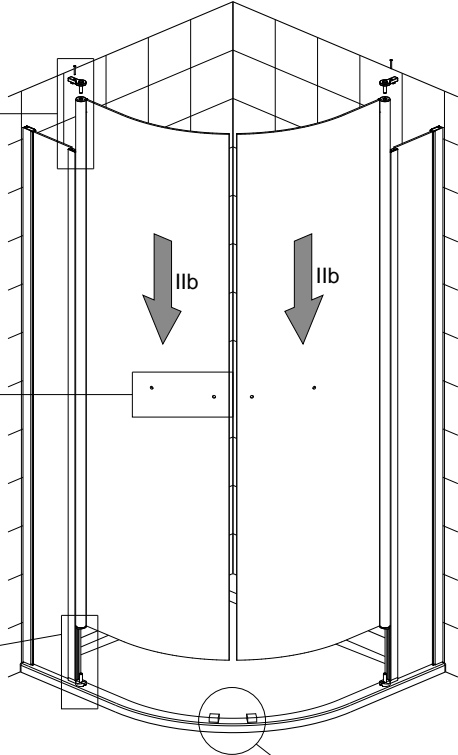
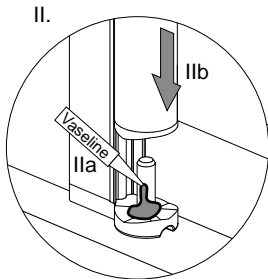
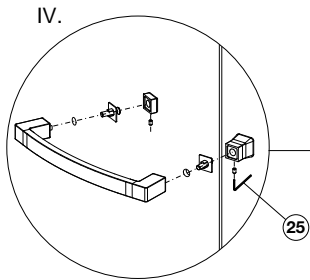
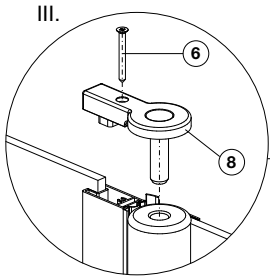
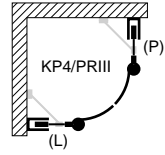


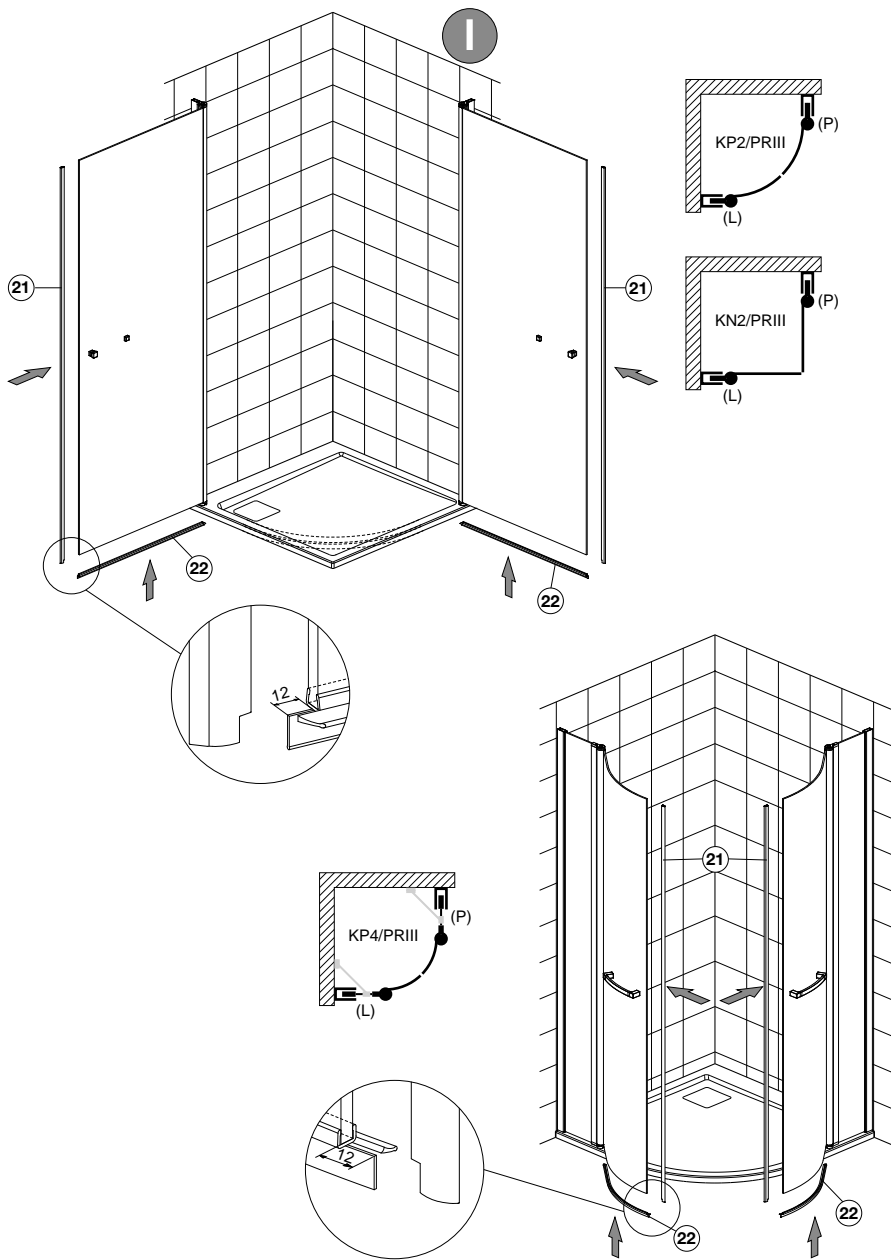

J




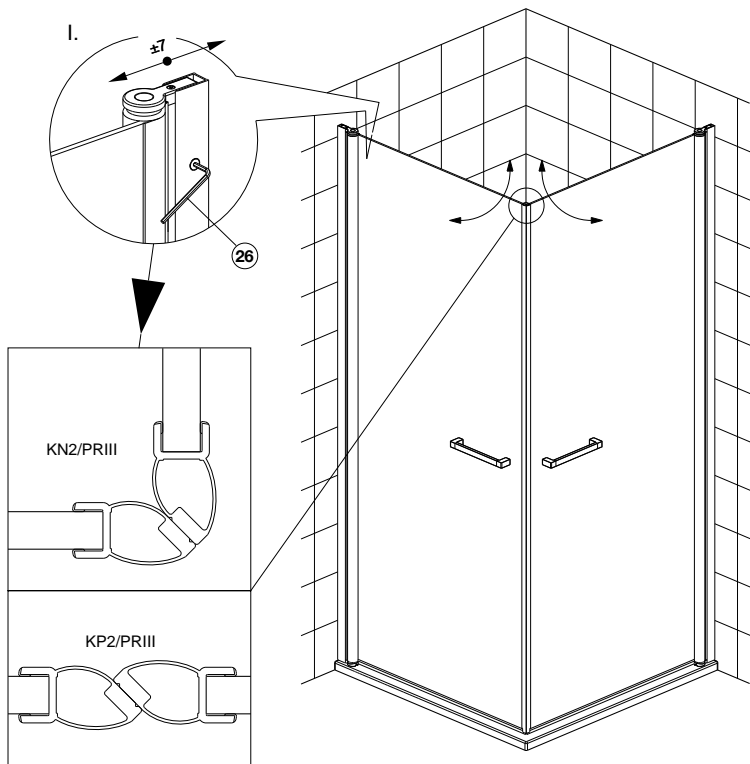
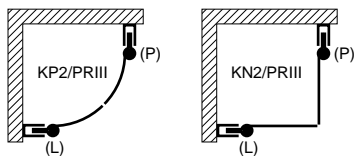


K

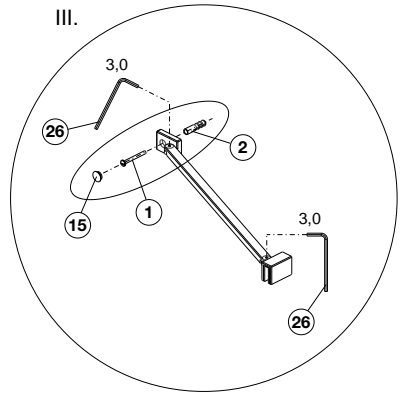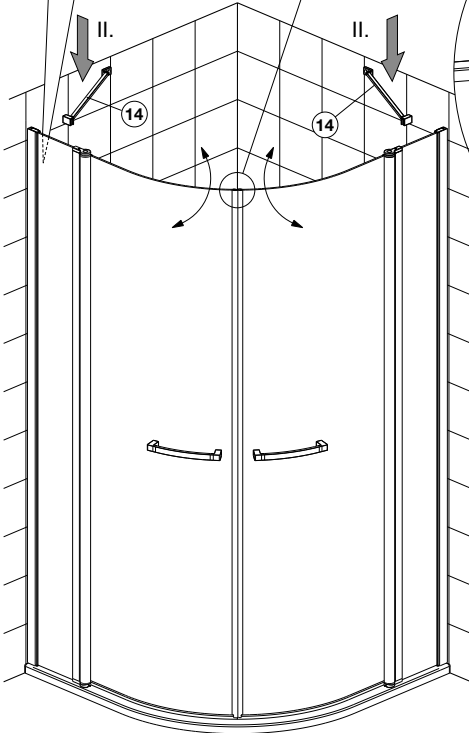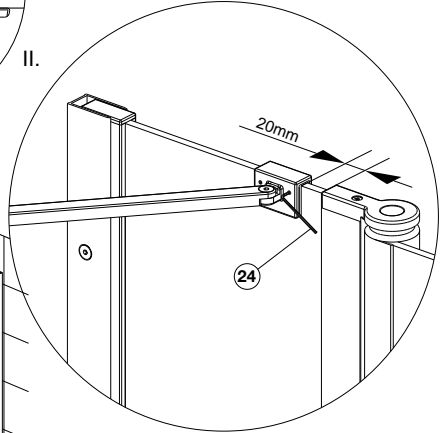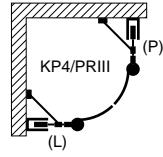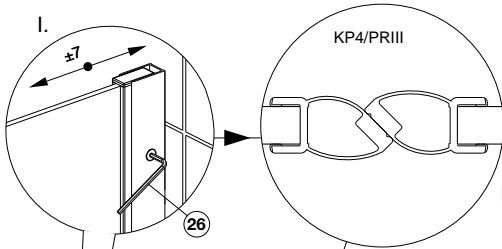


# KN2/PRIII, KP2/PRIII, KP4/PRIII


L

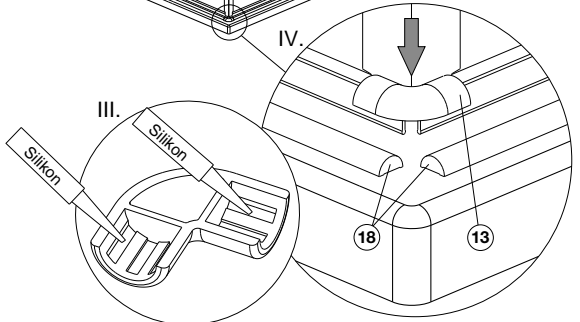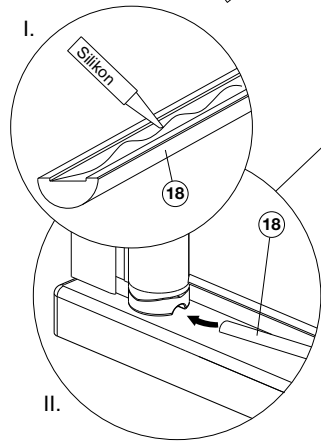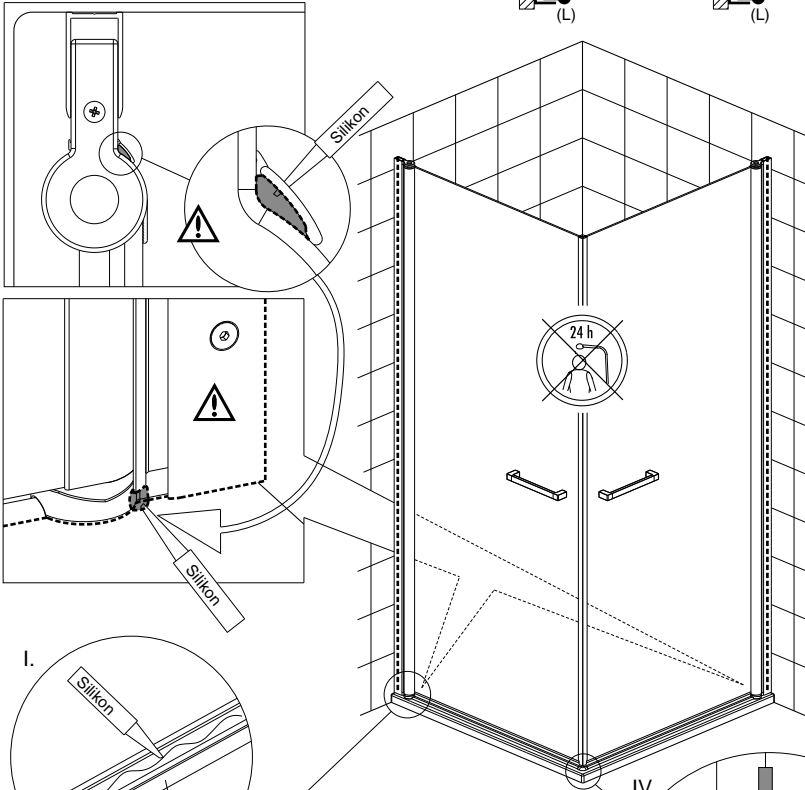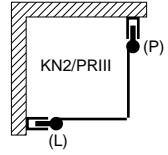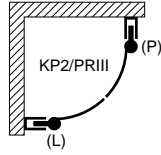

M

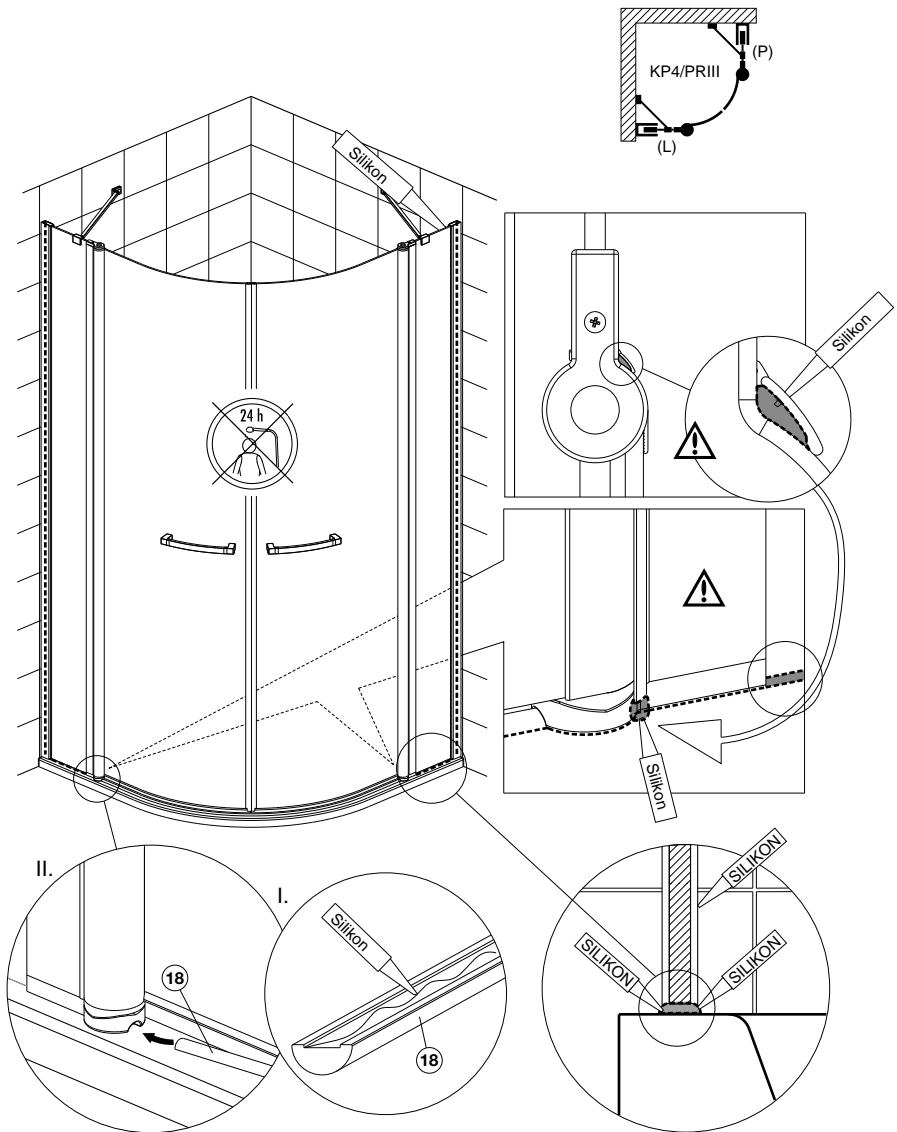


KN2/PRIII

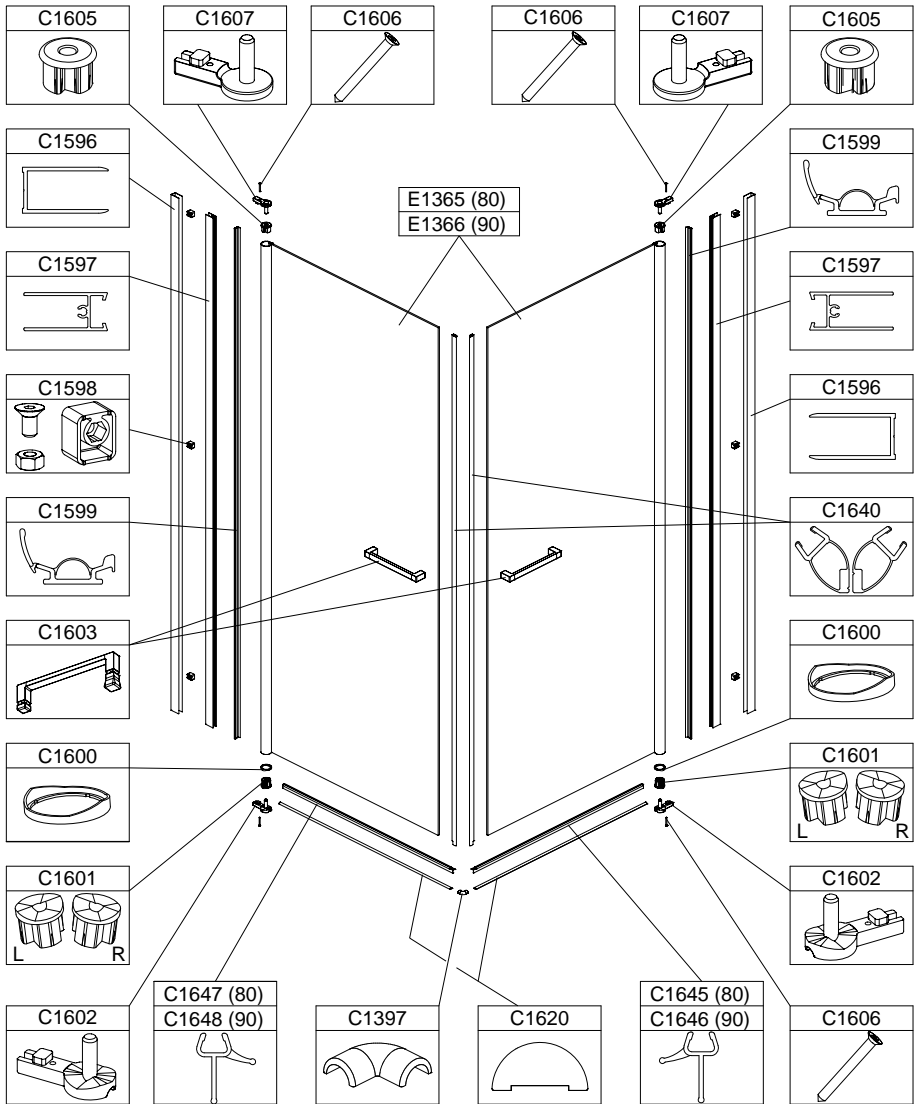



# KP2/PRIII

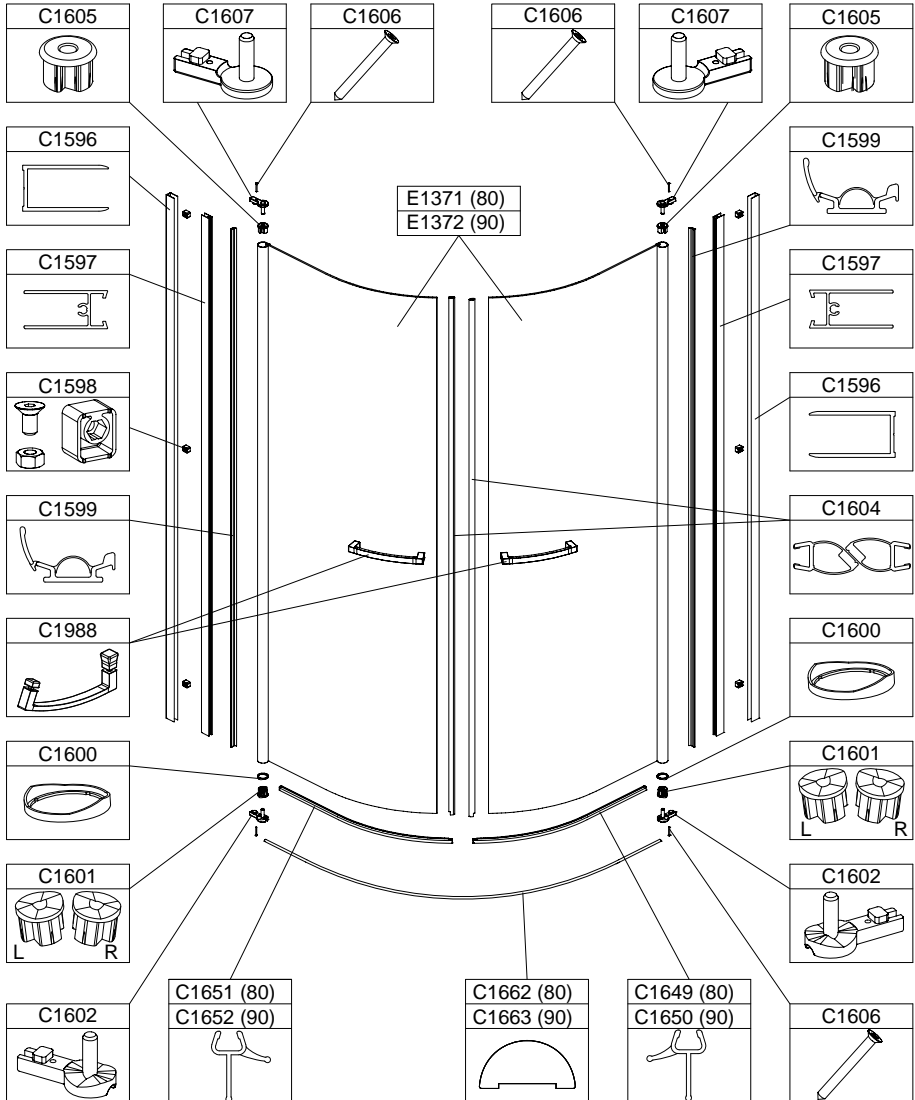

KP4/PRIII

