



3. Install two seal washers into couplings. Align the standing tube with inlets of couplings. Thread the couplings to standing tube.

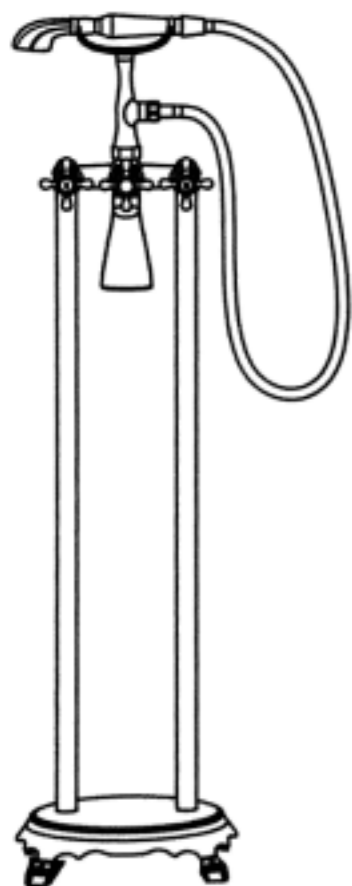

4. Install the hose to the hand shower and the tub filler. Confirm tub filler spout and hand shower functionality.
  - a. Turn the tub filler cross handle to the 'On' position initiating flow through the tub filler spout.
  - b. Confirm proper hot and cold flow through spout.
  - c. Remove the hand shower from the house and direct towards the bath.
  - d. Turn the diverter lever to direct flow from the spout to the hand shower.
  - e. With water now flowing through the hand shower check all hand shower house connections for leaks and confirm proper flow through the hand shower.
  - f. Turn the tub filler lever handle off.

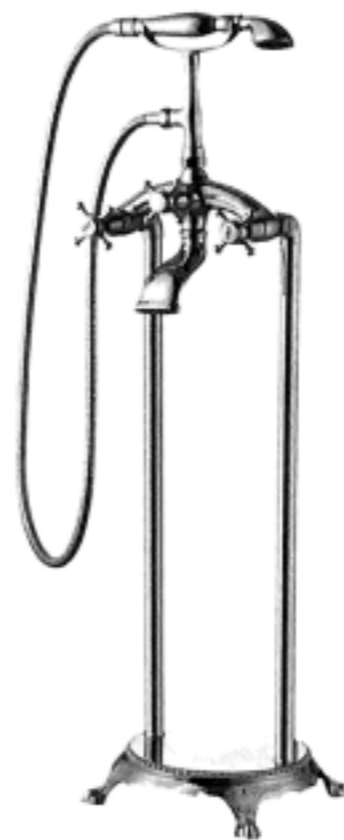

## FREESTANDING BATH FAUCET

### PRODUCT FEATURES:

- Elegant Brass Hand Shower
- Solid Brass Construction
- Ceramic Disc Cartridge
- Swivel Spout

### PACKAGE CONTENTS

- 1- Freestanding Tub Filler Faucet
- 1- Installation Accessories
- 1- Hand Shower And Hose
- 2- Cover Plate


Note: This instructions manual is written for universal use and may be subjected to specification variance of actual parts.



PLEASE CAREFULLY READ THIS INSTRUCTIONS MANUAL BEFORE INSTALLING AND USING THE PRODUCT.

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE REGARDING PRODUCT OPERATION AND MAINTENANCE.

## Product Diagram and Parts

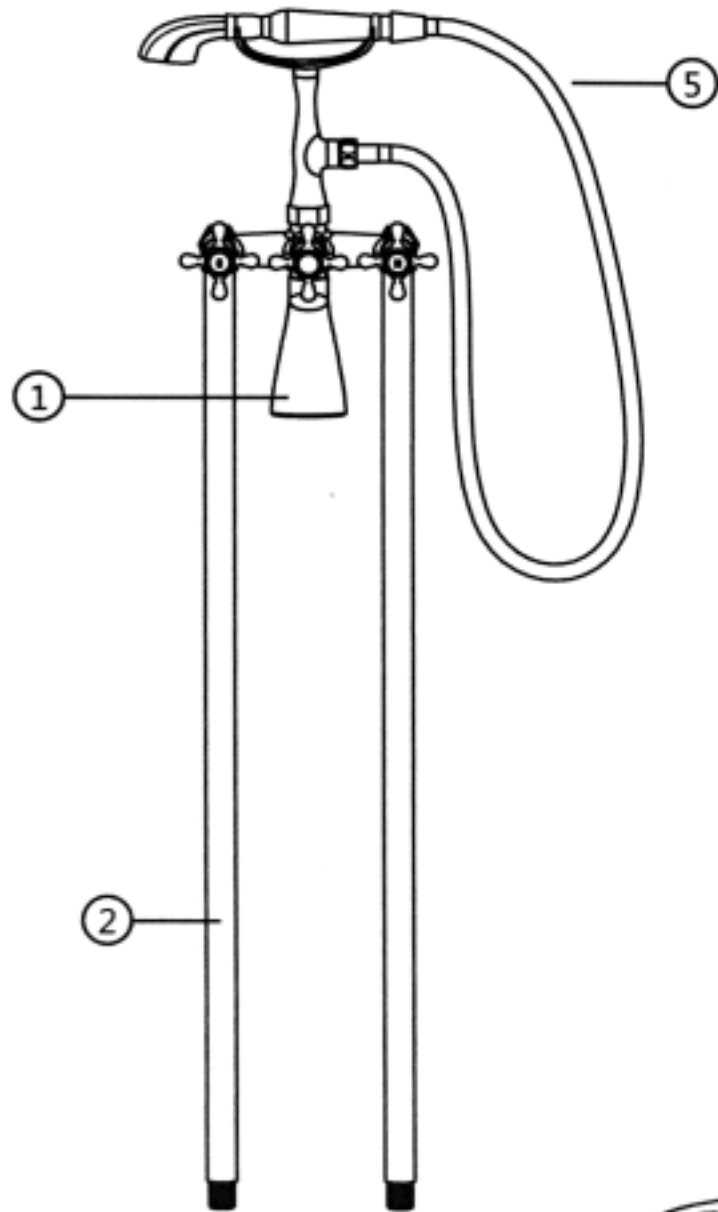


### Accessory List:

1. Tub Filler Spout
2. Standing Tube x 2
3. Floor Escutcheon
4. Hex Nut x 2
5. Hand Shower and Hose



## Faucet Installation Steps

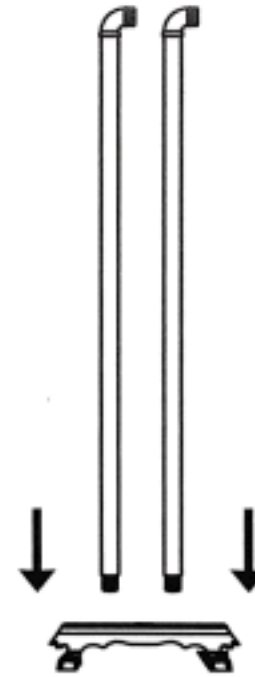

1. Place the standing tube into the hole of the floor escutcheon.

2. Screw the hex nut from the bottom of the floor escutcheon and lock it to the standing tube.  
Put the floor escutcheon with the standing tube on the level ground that has been measured and connected with the hot and cold water.

